


Strong eCNA-200 Automation



Setup and Operation Manual

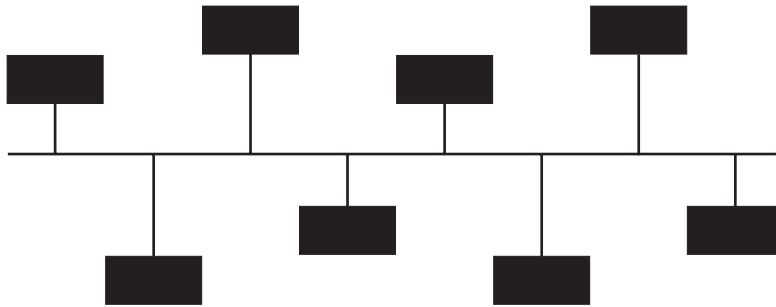

Revision 1.03
June 2006

eCNA-200

Setup and Operation Manual

PR014 Revision 1.03

This manual covers the setup and operation of the eCNA Cinema Automation.

Optional CineNet and related equipment is covered in the following product reference manuals:

- PR001 CNA Installation Manual
- PR002 CNA-200 Setup and Operation Manual
- PR003 CNA-150 Setup and Operation Manual
- PR004 CNA-100 Setup and Operation Manual
- PR005 QDC-400 Installation and Setup Manual
- PR006 ACP-50 Installation and Setup Manual
- PR007 RVC-5 Installation and Setup Manual
- PR008 PCI-64 Gateway Interface Installation
- PR009 CineNet Host Software
- PR010 RCM-10/RSM-10/RSM-20 Installation and Operation Manual
- PR011 Strong Dimmer Installation, Setup, and Operation Manual
- PR012 eCNA-100 Automation Manual
- PR013 eCNA-150 Automation Manual
- PR014 eCNA-200 Automation Manual
- PR016 Strong FP350 Installation and Operation Manual
- PR017 Eprad FP350 Installation and Operation Manual
- PR018 Paging system Setup and Installation Manual
- PR019 VNC Setup and Operation Manual
- PR020 CineSuite Installation and Operation Manual

Warranty

CineNet automation products, sold by STRONG INTERNATIONAL, are warranted against defects in materials and workmanship for one year from the date of purchase. There are no other express or implied warranties and no warranty of merchantability or fitness for a particular purpose.

During the warranty period, STRONG INTERNATIONAL will repair or, at its option, replace components that prove to be defective, provided the unit is shipped prepaid to the manufacturer directly or via an authorized distributor. Not covered by this warranty are defects caused by modification, misuse or accidents and any further damage caused by inadequate packing for service return.

STRONG INTERNATIONAL's obligation is restricted to the repair or replacement of defective parts and under no circumstances will STRONG INTERNATIONAL be liable for any other damage, either direct or consequential.


Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of STRONG INTERNATIONAL.

Table of Contents:

Introduction

1 System Overview	1
Introduction	1
Product Description	3
eCNA-200 Mainboard Configuration	4
Control Panel (Operator Interface)	8
TCP/ IP (Ethernet) Configuration	11
RS-232 Ethernet Configuration	11
HTML Ethernet Configuration	13
Supervisory Ethernet Configuration	14
Interface Hardware	14
TCP/ IP Networking Overview	17
Status LEDs	19
2 Setup	20
Introduction	20
Power Up Screen	21
Set-up Supervisory	23
Set-up Dimmer	33
Set-up Programs	35
Program Instructions	36
Program Operation	43
Building Programs	44
Programming notes	47
Set-up Cue Learn	48
Set-up Clock Start Times	49
The Copy Function	50
Local Copy	51
Network Copy	53
Manual Control Screen	55
Network Status Screens	55
LSN Status	56
LIN Status	56
Remote Monitor	58
3 Operation	59
Cue Learn Function	59
Cue Window Factor	59
Synchronous Operation	62
Endless Loop Operation	63
Running the Presentation	63
Event and Show Log	66
Event Log	69
Event Filters	70
Show Log	72
System Fault and Status Messages	73
Fault Condition Messages	73
Status Messages	77

Additional Software	79
CineNet Host	79
CineSuite Software	79
Software Changes	80
Bootloader Changes	84
Supervisory Defaults Explained	85
The States of “No-Op” and “None”	87

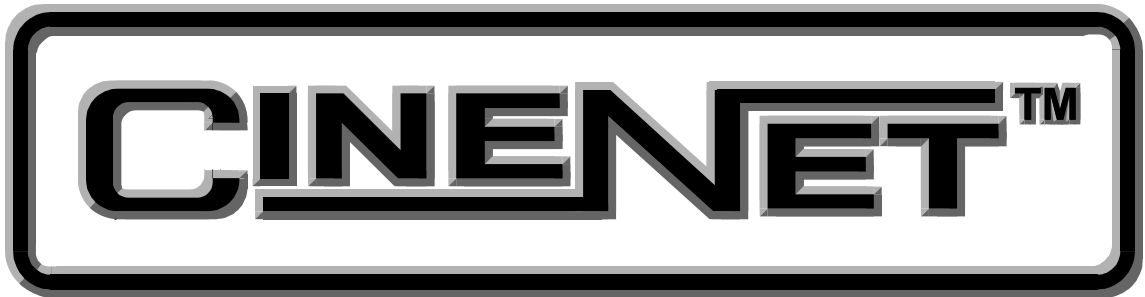

An Introduction to
THE CINENET™ SYSTEM

Strong International's CINENET™ is an automation and control network designed specifically for the Motion Picture Theatre Industry. CINENET™ provides a low cost connection to various control and I/O devices in the projection booth, auditorium, and throughout the theatre complex. CINENET™ is divided into multiple network layers: The Local Synchronous Network (LSN) is a complex-wide data network that provides advanced synchronous projector control, user selected data transfer and real-time remote automation status. The Local I/O Network (LIN) is designed to provide remote I/O control for each screen in a complex. A standard RJ45 Ethernet connection provides operation over TCP/IP for interface with various devices. The CINENET™ network offers many advantages over point-to-point wiring such as reduced installation costs, reduced wiring errors and high noise immunity. CINENET™ also allows management to program and access real-time status of all auditoriums in the theatre complex from a central location using a personal computer. The eCNA is capable of coordinating both analog and digital projection equipment with constant improvements being made to help keep this task as simple as possible. Strong will continue to develop new CINENET™ products that will provide the control and flexibility the theatre industry demands.

1 System Overview

Introduction

The eCNA-200® Cinema Network Automation is a CINETNET™ compatible automation system specifically designed for the Motion Picture Theatre industry. The system is modular in design, consisting of the operator interface and system I/O devices. The Main Computer and each I/O device is defined by its common functions and locations in the booth and communicate on a serial communications link. Automation systems and remote stations distributed throughout the booth and other areas of the multiplex communicate on a second serial communications link and optionally via TCP/IP.

To enhance the operation of the eCNA-200 and provide a broader level of control, the CINETNET™ Gateway PC Card and Host software is available. This product will provide a PC interface to the eCNA-200 automations. The Host PC and software will allow management to access programming, real-time data and diagnostic information from all systems connected to the network. Different installations may require different hardware, therefore there are several host interface options in production. The eCNA has the capability to communicate directly via ethernet with a host computer using CineSuite software. This TCP/IP communications interface is also at the heart of many other valuable features such as the KDI and the CAI protocol.

Users and Installers of the eCNA-200 are encouraged to read all sections of this operators manual to become familiar with the system and its capabilities. This automation was designed to be easy to set-up and operate. But it is the responsibility of the user to learn how to do so. With a solid understanding of how the eCNA-200 operates you can take full advantage of all its capabilities.

If while setting up or operating the eCNA-200 automation you find any part of the manual to be unclear or incorrect, please let us know.

The eCNA-200 can store up to nine separate programs, each capable of twenty separately cued sequences of all available functions. An internal clock can provide programmed start times, and a "Cue Learn" feature automatically initiates the next sequence in the event of a missed film cue.

The eCNA-200 allows two levels of programming: a basic or low level for programming of normal operations and schedules, and a higher level for use by supervisory personnel. Programming of either level is easily accomplished once familiar with the system. Most of the initial programming should be accomplished as the equipment is installed according to the requirements of the theater, and can be changed only by supervisory personnel with knowledge of the high level password.

A low level password, *Password #1* (set by the Supervisor), allows a level of programming for normal operation. Generally, the daily program operation will require only modification of show times, film format or volume changes that occur with normal changes of feature films.

This level of programming is accessed by either password. An internal DIP switch is provided to enable the high level password requirement, as well as a Host and locally configurable override that enables/ disables the internal switch.

The eCNA-200 controls all booth and auditorium functions, including house lights with half-level,

stage lights, curtain (with Curtain Call feature), eight sound formats, lens/masking control, special projector operation, and intermission functions such as a slide projector and curtains. Each system is equipped with network and local copy functions, allowing the user to copy programs and set-up data from a remote eCNA-200. Interlocked operation is easily accomplished for up to 63 units in any combination. The control panel includes a full set of manual controls.

It is important to note that the eCNA-200 functions in a manner similar to current automation technology in that a prescribed sequences of events are performed at a given input, such as pushing the Start button or sensing of a foil film cue. However, the eCNA-200 can perform many more functions in a wide variety of ways, all of which are fully programmable.

The eCNA-200 is a *single-cue* automation. This means that events, such as lens, masking and sound changes, are initiated by a cue (normally foil placed on the film). These events are stored in the eCNA-200's memory and are called *Programs*. The eCNA-200 gives you the ability to build and store up to nine different programs. Each program can contain up to ninety-nine *instructions* which are performed sequentially. An *instruction* is a particular function that will be executed during a *program step*. It may have a timed relationship to the step; that is, stage lights may be programmed to dim ten seconds after the instruction is encountered in the program. Each function is identified by an *instruction number*. Cues can now also come from assignable inputs located on the 3943x series of I/O termination panels. These inputs may be a switch closure or a voltage input.

The eCNA-200 incorporates a unique feature called *Cue Learn* in which cue times for each program are stored in the computers memory. Cue Learn is activated by the operator before a film is run for the first time. All cue times will then be "Learned" or stored in memory. On all subsequent runs the eCNA-200 expects to see the film cues at a particular time. If a cue is not seen, due to a missing or worn cue foil, the computer will automatically "issue" a cue which will advance the program and keep the show running properly. Cue Learn also makes it possible to operate a show without film cue foil at all!

The eCNA-200 also provides a configuration or set-up section that allows you to customize the system. This section is called "Supervisory". Supervisory is a set of system functions including relay contact configuration, power up states, maintenance schedules, interlock configurations, along with other system parameters most of which will be set up at system installation and not changed unless there is a hardware change. Most Supervisory functions can only be changed using *password 2* (high level password).

The eCNA-200 provides for storing "Clock Start Times". This can be an extremely useful tool for the projectionist and manager. The CNA-200's internal clock and calendar allows the user to store up to ten clock start times per day for the entire week.

The primary difference in the eCNA-200 when compared with the older CNA-200 is its ability to function over TCP/IP via a standard ethernet connection and LAN.

This recent versatile addition to the CNA family will allow a virtually limitless interface for user customization, administrative messaging/ scheduling, and future compatibility with the increasing number of devices which communicate over TCP/IP. Application software utilizing the protocols used with this exciting new interface is constantly being written, therefore refer to the eCNA protocol manual to see what is new. Currently there is the KDI (Keyboard, Display Interface) remote server function which allows administrative users to send custom messages over TCP/IP to their projectionists individually, in groups, or broadcast as a whole. As applications are developed, the

operator in the booth will be able to interact, via the keypad, with scheduling programs, administration, and help menus etc...

A second application currently available to the user is an interface provided for use with a digital content player. The CAI (Cinema Automation Interface) protocol operates in conjunction with the content player in order to provide seamless transitions between events during a presentation. This protocol will allow the eCNA and a digital content player to share time on the screen without operator intervention or the audience experiencing any dead time while making transitions during a sequence of events.

Product Description

The following sections discuss the topology of the eCNA-200 automation system. The standard eCNA system can be divided into three major parts: the Network, Main Controller and the Termination Panels.

Communications to the termination panels and other remote eCNA-200/ CNA-200 systems is accomplished via multiple interface ports on the Main CPU:

The Local I/O Network Port - This is the interface for the Local I/O Network (LIN) that will support the Dual or Single Termination Panels and other auxiliary devices.

The Local Synchronous Network port - This is the interface for the Interlock and copy functions between CNA systems, Remote Monitors and Host computer.

A third TCP/IP or ETHERNET communications port is provided for LAN communications and additional product interfacing. Additional serial ports exist and are to be implemented in the future. At present time during the creation of this manual, the Ethernet port is the only other port utilized by the end-user.

Local I/O Network (LIN)

The standard CNA-200 automation system consists of a control panel and termination panels. The control panel houses the main computer and power supply which controls the termination panels via the LIN (Local I/O Network). The LIN provides the serial data communications as well as power to the termination panels.

The LIN supports devices such as dimmers, failsafes, auxiliary control panels and automatic volume control. The LIN is designed to support up to 32 devices.

Local Synchronous Network (LSN)

The LSN (Local Synchronous Network) is an RS-485 data link that supports CNA Automations, remote stations, synchronous communications for interlock, network copy functions and a Host PC. The automation systems are connected together in a daisy-chain configuration.


Each CNA automation on the LSN is identified with a unique Id number. This number should correspond with the "house" number.

eCNA-200 Mainboard Configuration

Various aspects of operation can be customized with DIP switch settings.

eCNA-200 DIP Switch Settings

Current to version 2.001

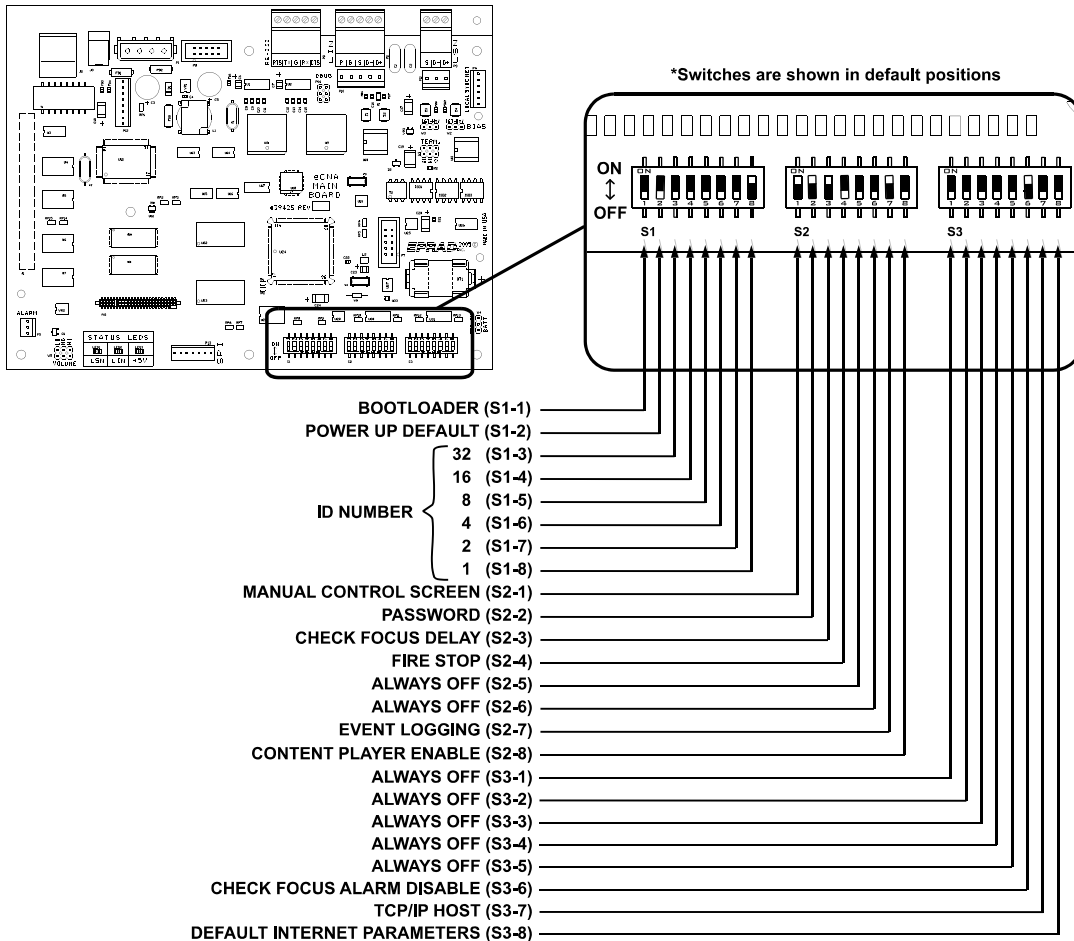

S1-1 Bootloader

- On :Force Bootloader.
- Off :Normal Use. (Factory Default)

The Bootloader program supports the LSN flash update network commands to load the eCNA-200 application program into flash memory over the LSN. The Bootloader itself is erase protected and cannot be erased by the user. This protection ensures that the Bootloader can always be reloaded even if the rest of the flash memory is corrupted through programmer error or by other means. If flash memory was corrupted, setting this switch to on will force the Bootloader program at power up.

S1-2 Power Up Defaults


































































- On :Force “Supervisory Defaults” on power up. Default Supervisory data will be restored on each power up overwriting all user programmed supervisory data.
- Off :Will **not** overwrite user programmed supervisory data on power up. (Factory Default)

S1-3 through S1-8 Network ID

Sets the LSN network ID value of the eCNA.

S1-3	On	1	Decimal value = 32
	Off	0	Decimal value = 0 (Factory Default)
S1-4	On	1	Decimal value = 16
	Off	0	Decimal value = 0 (Factory Default)
S1-5	On	1	Decimal value = 8
	Off	0	Decimal value = 0 (Factory Default)
S1-6	On	1	Decimal value = 4
	Off	0	Decimal value = 0 (Factory Default)
S1-7	On	1	Decimal value = 2
	Off	0	Decimal value = 0 (Factory Default)
S1-8	On	1	Decimal value = 1 (Factory Default)
	Off	0	Decimal value = 0

Use table to configure the Id number with switches S1-3 through S1-8.

OFF=  ON= 	ID = 16 	ID = 32 	ID = 48 
ID = 1 	ID = 17 	ID = 33 	ID = 49 
ID = 2 	ID = 18 	ID = 34 	ID = 50 
ID = 3 	ID = 19 	ID = 35 	ID = 51 
ID = 4 	ID = 20 	ID = 36 	ID = 52 
ID = 5 	ID = 21 	ID = 37 	ID = 53 
ID = 6 	ID = 22 	ID = 38 	ID = 54 
ID = 7 	ID = 23 	ID = 39 	ID = 55 
ID = 8 	ID = 24 	ID = 40 	ID = 56 
ID = 9 	ID = 25 	ID = 41 	ID = 57 
ID = 10 	ID = 26 	ID = 42 	ID = 58 
ID = 11 	ID = 27 	ID = 43 	ID = 59 
ID = 12 	ID = 28 	ID = 44 	ID = 60 
ID = 13 	ID = 29 	ID = 45 	ID = 61 
ID = 14 	ID = 30 	ID = 46 	ID = 62 
ID = 15 	ID = 31 	ID = 47 	ID = 63 

S2-1 Manual Control Screen

- On :Enable the “Manual Control” screen. (Factory Default)
- Off :Disable the “Manual Control” screen.

The Manual Control screen allows the manual control of most outputs including: sound, lens, masking, lights and volume level.

S2-2 Password

- On :Requires use of the “high level” password to access many of the programming functions. (Factory Default)
- Off :Disables the password. No password is required to access the programming functions. High level password is user-configurable, This switch can be disabled via the Host or locally.

S2-3 Check Focus Delay

- On :Enables the “Check Focus Delay” function. In Clock Start or Timed Start the alarm will sound prior to the show starting. (Factory Default)
- Off :Disables the “Check Focus Delay” function.

The Check Focus feature alerts the operator that the show is about to start. In Timed Start the alarm will begin to sound 7 seconds prior to the show starting. This gives the operator time to make any quick adjustments and to insure the image on the screen is in focus.

This feature is available for manual start inputs as well.

S2-4 Fire Stop Option

- On :Enables the “Fire Stop” function.
- Off :Disables the “Fire Stop” function.(Factory Default)

39331 Booth Termination Board - Converts the Remote Stop input to a Fire Stop input and the Slide Projector relay (K13) to a Fire Stop output. Fire Stop *acts* like a Remote Stop with the following exceptions:

- Sound is Muted.
- Slide Projector on *39330 Console Termination Board* is turned off *or* held off.
- K13 relay (Slide Projector) on Booth Termination board is turned on.
- Zones 3-16 are unaffected by a firestop input.

If this feature is enabled the slide projector must be wired to the 39330 Console termination board.

39332 Termination Board - Remote Stop input must be enabled on board. (W1-OPT1 jumper across pins 2 and 3 changes the Film Tension input to a Remote Stop input.) Converts the Remote Stop input to a Fire Stop input. Fire Stop *acts* like a Remote Stop with the following exceptions:

- Sound is Muted.
- Slide Projector is turned off *or* held off.

S2-5 Always Off

- On :Undefined
- Off :Undefined (Factory Default)

S2-6 Always Off

- On :Undefined
- Off :Undefined (Factory Default)

S2-7 Event Logging

- On :Enabled - Events are sent to the Host computer.(Factory Default)
 Off :Disabled - Events are not sent to the Host computer.

S2-8 Content Player Option

- On :Enables interface with Content Player.
 Off :Disables interface option. (Factory Default)
 Used when using eCNA to control a digital content player.

S3-6 Check Focus Delay alarm

- On :Disables the RCM/ RSM-10 “Check Focus Alarm” (Factory Default)
 Off :Enables the RCM/ RSM-10 “Check Focus Alarm”

S3-7 TCP Host

- On :TCP Host
 Off :LSN Host (Factory Default)
 Host communications can be either Ethernet or LSN based. This switch selects which one to use.

S3-8 Default Internet Parameters

- On :Default parameters
 Off :User parameters (Factory Default)
 Selects from Default parameters and EEPROM (User-configured parameters)
 Factory default parameter is: IP- 192.168.0.254, Half Duplex.

S3-1 through S3-5, S3 Always Off

- On :Undefined
 Off :Undefined (Factory Default)
 These switches are undefined and should remain in their factory “off” positions.

Control Panel (Operator Interface)

The automation controller and front panel interface can either be surface mounted to the booth wall or can be mounted in a standard 19" rack. The unit houses the main CPU, the front panel interface and the power supply for local and LIN power.

The control panel is used to setup, program and run the shows. It also displays error, administrative and status messages to the user. The control panel has nine manual override switches used for emergency manual control. These are rocker switches and their general functions should be obvious to the operator. All manual controls circumvent the electronic circuitry giving the user the ability to control the major functions in the event of an automation failure. The manual control functions are listed below:

1. PROJECTOR - Maintained ON/AUTO
2. LAMP - Maintained ON/AUTO
3. CHANGEOVER - Momentary OPEN/CLOSE
4. LENS (*LENS & MASKING) - Momentary FLAT/SCOPE
5. LENS (*LENS & MASKING) - Momentary SPECIAL
6. CURTAIN - Momentary OPEN/CLOSE
7. HOUSE LIGHTS - Momentary UP/DOWN
8. STAGE LIGHTS - Momentary UP/DOWN
9. AUXILIARY - Momentary ON1/ON2

*Front panel with DPDT switches.

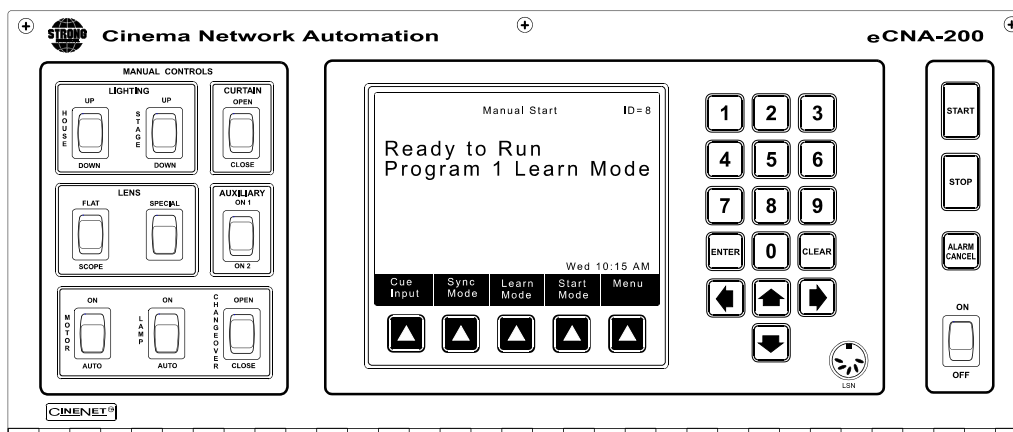


Figure 1.2

To the right are POWER, START, STOP and ALARM CANCEL keys. The programming keypad and display screen make up the remainder of the panel.

The keypad consists of numeric, cursor and *soft* keys. The Display Screen shows the current status of the system in the RUN mode, data being edited in the SET-UP mode, and administrative, scheduling, peripheral or any other administrator programmed information in the CLIENT SCREEN mode.

POWER - This switch is used to turn the automation on.

STOP - Forces the automation to a stop condition or cancels a timed or clock start operation.

START - This key is used to manually start or restart the presentation which will run the selected program.

ALARM CANCEL - This key will cancel a local and remote alarm. It also serves to clear fault messages displayed on the screen. Pressing the Alarm Cancel key once will cancel the alarm. Pressing the key again will clear the fault condition. (See *System Fault and Status Messages*).

Keypad

The keypad is used for data entry. This is used to set up and program the system. It is also used for selecting the start mode, feature formats, sync enable and cue learn. The function of each key is briefly described below.

ENTER - This key is used to save edited data and move the cursor to the next field to edit.

CLEAR - This key is used to reset a numeric data field to 0.

CURSOR (right, left, up, down) - These keys are used to change screens or fields to view or edit data.

SOFT KEYS - These keys are specific to each screen in the system and will change as you move to different screens.

eCNA-200 Home Screen

This is the eCNA-200 *Run Mode* or *Home* screen. This screen provides the user with information such as Show status, Program number, Cue Learn and Cue number, Sync Mode, Start Mode and film format messages.

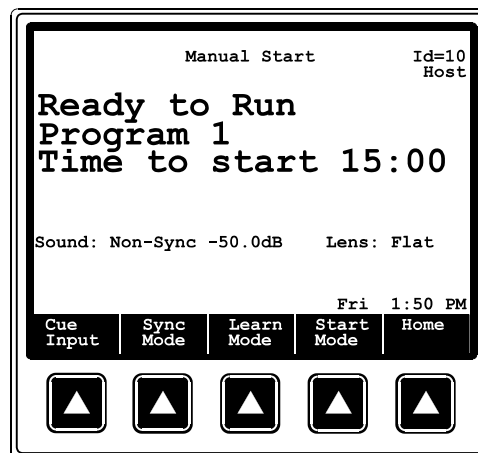


Figure 1.3: *Run Mode* or *Home* screen.

The Display Screen can be adjusted to provide the best viewing angle. Open the front door on the eCNA-200 and find the blue potentiometer. Turn the pot with a small flat blade screwdriver until the desired viewing angle is achieved.

TCP/ IP (Ethernet) Configuration

The eCNA-200 will need to be configured in order to assist other devices in interfacing with it via ethernet. Configuration is accomplished either with the “Dumb-Terminal” P8, RS-232 port on the eCNA-200's mainboard, or the Ethernet RJ45 connection. The installer will need to configure the IP, Default gateway, and the subnet mask. The eCNA's Hardware or MAC address is also configured during setup. eCNA-200s with a firmware version at or above 2.008 have a supervisory screen that allows direct, on-board IP changes without the need for any external programs or connections. See the supervisory configuration section of this manual for details on changing your IP address locally.

RS-232 Ethernet Configuration

The installer can use a windows PC or Laptop running a terminal emulator or any other device with dumb-terminal capabilities and a RS-232 communications port. Settings are as follows: 19,200 Baud, 8 Data bits, No-Parity, 1 stop-bit, and hardware handshaking. With power off, connect the cable from your terminal to P8, upon power up the terminal should come up with the configuration screen shown below, this is the eCNA's Ethernet configuration menu.

Any selections made using this method are stored in the eCNA's non-volatile EEPROM memory and will remain until changed by the user.

Note: a DIP switch is provided on the mainboard to select a factory default configuration for the ethernet communications port. These settings are as follows:

IP: 192.168.0.254

Half Duplex

It should be noted here that the Host software can now run on either the LSN as before, or Ethernet with the CineSuite software package.

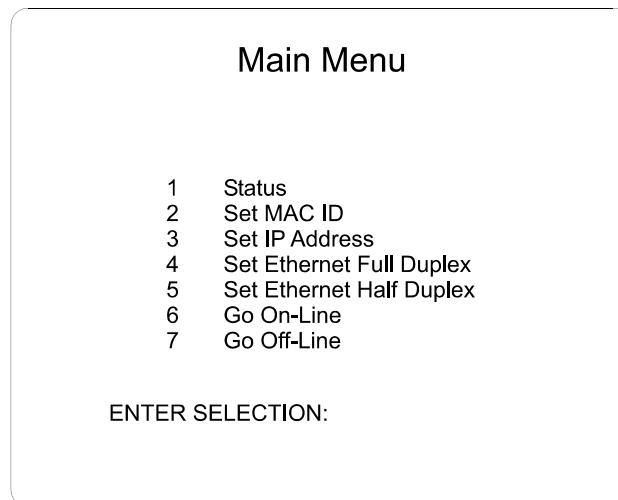


Figure 1.4
The eCNA-200 TCP/IP setup screen

This is a listing of the menu items encountered while setting up the eCNA's IP address and networking options through the RS-232 interface. Warning: HyperTerminal© will most likely not work when using a PC as a “Dumb Terminal” for altering the eCNA's Ethernet configuration settings. Use Polygon or ProComm Terminal emulator instead

This is a listing of the menu items encountered while setting up the eCNA's IP address and networking options through the RS-232 interface.

Main Menu

- 1 Status
- 2 Set MAC ID
- 3 Set Ethernet Full Duplex
- 4 Set Ethernet Half Duplex
- 5 Set CNA IP Address
- 6 Set Subnet Mask
- 7 Set Gateway IP Address
- 8 Go On-Line
- 9 Go Off-Line

ENTER SELECTION: _

Selection 1

CNA-200 2.001

Status:

MAC ID: dd-dd-dd-dd-dd-dd

Mode: Full Duplex

CNA IP Address: 192.168.001.000

Subnet Mask: 255.255.255.000

Gateway IP: 000.000.000.000

CAI: On-Line

Selection 2

MAC ID(dd-dd-dd-dd-dd-dd) :

Selection 3

Setting Full Duplex

<<<You must cycle power to activate this new parameter.>>>

Press any key to continue_

Selection 4

Setting Half Duplex

<<<You must cycle power to activate this new parameter.>>>

Press any key to continue_

Function 5

CNA IP Address(192.168.000.000) :

Function 6

Subnet Mask(255.255.255.000) :

Function 7

Gateway IP(000.000.000.000) :

Function 8



Setting On Line

Function 9



Setting Off Line

HTML Ethernet Configuration

Ethernet settings can be configured via your web browser when the eCNA is connected to your LAN (Local Area Network). This option does not provide a means for configuring anything but the IP, Subnet mask, and Gateway IP at this time. A computer on the same local network can access the configuration/ status page when the eCNA's IP address is known and entered in the web browser's address bar:

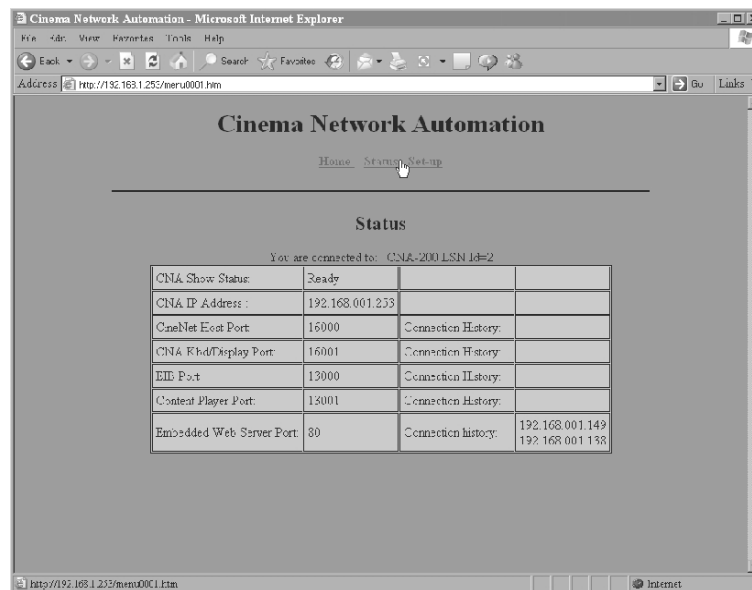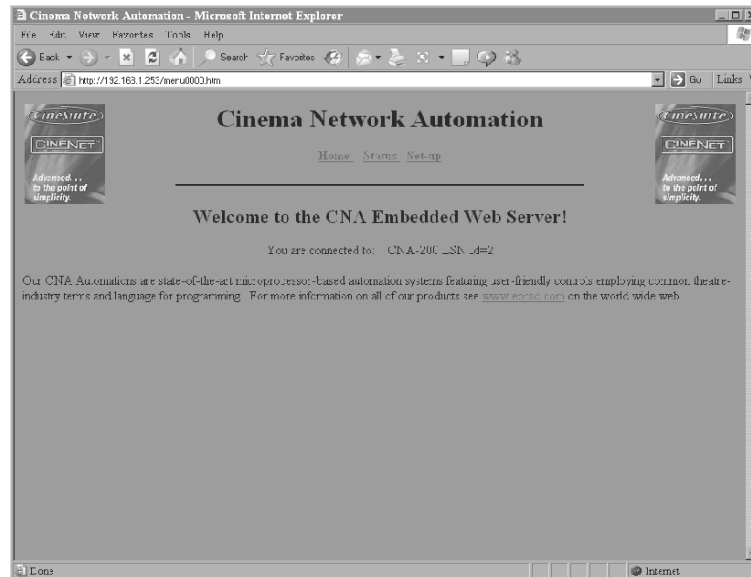

Embedded HTML server shown, IP address browser entry directs user to a welcome screen with hyperlink selections. The second illustration is the status page showing various network parameters.

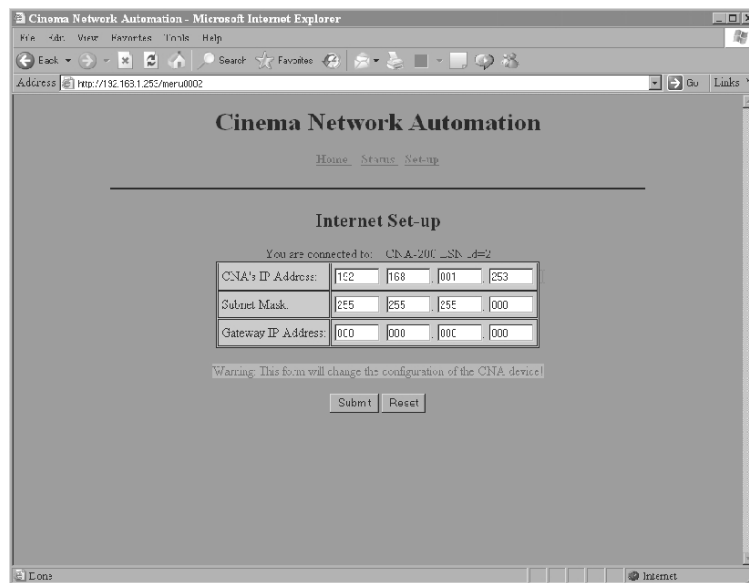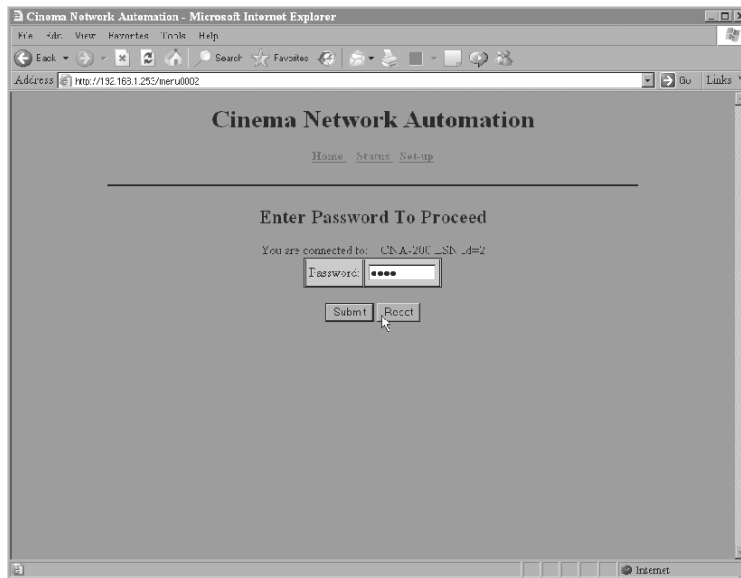

The above windows show the password login screen for the IP configuration page and the configuration page itself. A non-configurable password is used to access the IP settings where changes can be made to the device IP, subnet mask, and gateway IP address. The user is prompted to reboot the eCNA when changes are submitted.

Local Configuration

eCNA-200s with version 2.008 and above can be configured locally via the supervisory menu. Here the IP, Subnet and gateway can be changed. Please refer to the section on supervisory setup for details.

Interface Hardware

The illustration below shows the location of the Ethernet (10Base-T, RJ45) TCP/IP Connector. Also shown is the P8 (RS-232) header used for configuration of the TCP/IP network settings. In order to use the terminal connection an adaptor cable is required to plug into the 10 pin header and interface with a standard PC RS-232 serial port.


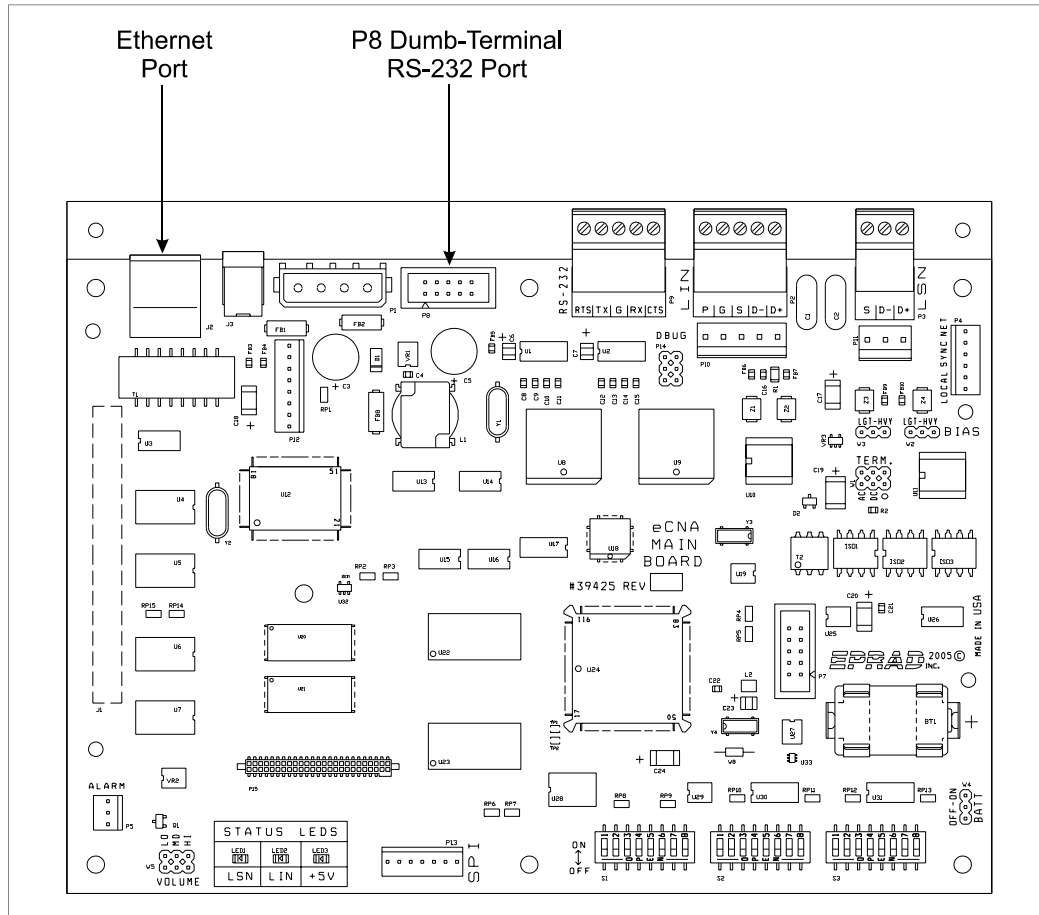


Figure 1.5

Ethernet Connection Hardware

The eCNA’s ethernet port is of the 10BaseT variety, this means that it communicates at a maximum of 10MB/s. This makes it a natural requirement that the hardware path support this speed. The cable should be of the standard Cat5 type and terminate in RJ45 connections. Twisted pair wiring is used and should follow standard conventions for ethernet hardware. Below is a diagram representing these wiring terminations. The RJ connectors when installed must be of the proper type for the wire used (Stranded or Solid). Sound termination is required for proper reliable performance, as is true for any type of networking connection.



A special tool is used to crimp the RJ45 connector on the wire and practice is usually needed for a reliable termination. Consult your IT staff or a qualified electrician during installation if problems arise.

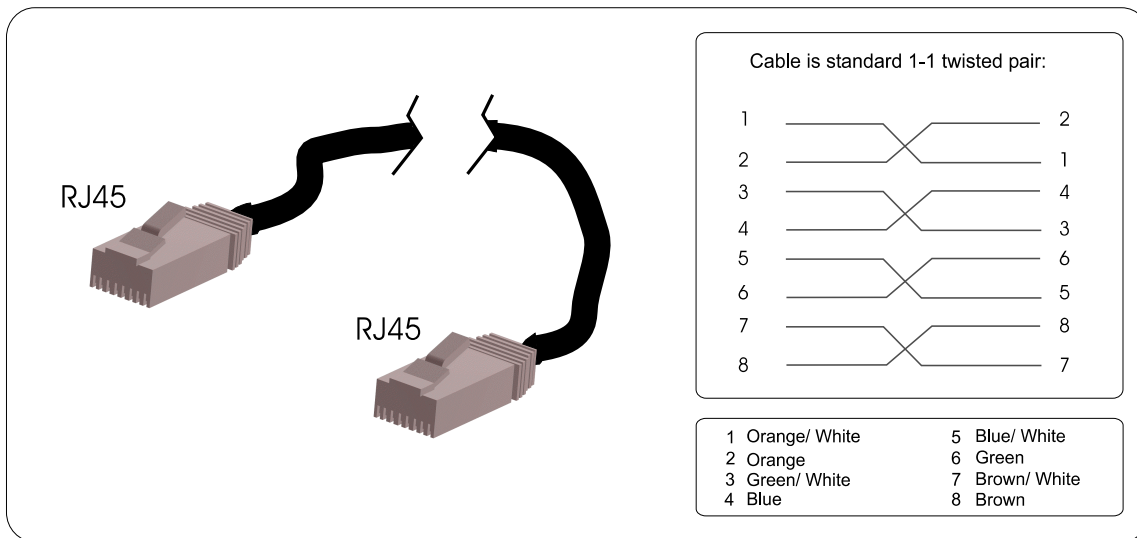

The hub, switch or router used with your network must also be configured to accept 10MB/s network traffic. Most hardware manufactured today accepts, and in many cases automatically configures itself to either 10, 100, or 1000 MB/s. Some older hardware requires a switch to be manually set to the proper network speed.

A simplified wiring connection can also be used, the above cable is a standard store bought ethernet cable, it may be desirable to wire only the necessary contacts when terminating your own connections. The critical connections are shown in the diagram to the right.

Some users may find it necessary to connect their eCNA directly to their host computer using the ethernet port. In this case a special cable known as a crossover cable must be used. Most hubs and switches have automatic crossover in them eliminating the need for such a cable, however in the case of a direct eCNA to PC connection the crossover must be hard-wired. The diagram to the right shows the crossover connection.

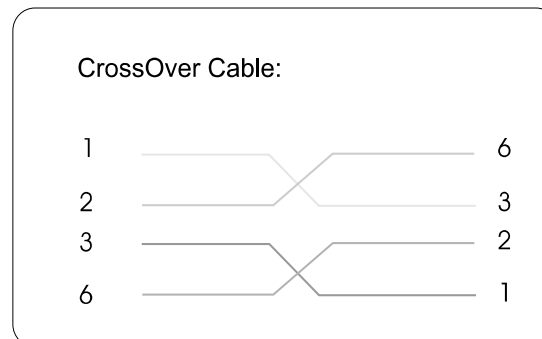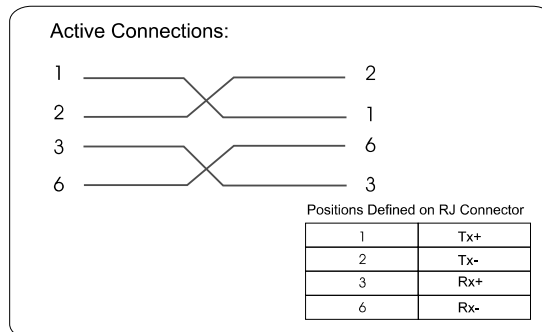

TCP/ IP Networking Overview

The eCNA should be “behind” your router, plugged into a hub or switch. It is beyond the scope of this manual to describe the intimate details of computer networking. The configuration suggestions given are basic examples designed to illustrate network connection. The internet is a great resource for the novice network user.

The eCNA is not configurable for DHCP (or Dynamic Host Configuration Protocol) addressing as of the writing of this manual, therefore a “Static IP” must be used. The main router with hub or switch connected (or integrated) should be configurable for either DHCP or static IP. Static IP requires that every device, computers, etc... behind the router, be configured for a static IP. This address will not change and every time the Router, computer or eCNA is rebooted, the network’s hardware devices use the same address.

The other option for your router is DHCP with range limiting, or reserved IPs. This will allow any computer or DHCP enabled device plugged into your router (When acting as a DHCP server) to gain an IP address and network access. IF your network is using DHCP and you know the range of IPs used by the DHCP server, the eCNA can be used if the server is configured to accept it outside of that range of numbers. The server must however, never assign the eCNA’s address to any other device. This situation would cause a duplicate IP conflict and require intervention. Some DHCP software allows IP range limiting and most allow static addressing.

Below are two very basic examples of possible network designs. The first shows eCNAs connected behind a router/ switch/ hardware firewall. The host PC can be configured to utilize the internet via the router’s uplink, the decision to do so is up to the administrator and recommended only if remote functions are actually necessary. The Host PC can be used for everyday tasks like email and web-browsing.

The second illustration shows an isolated intranet where there is no outside access, all of the network components and hardware are dedicated to the eCNA/ theatre automation network. This of course will make advanced remote tasks through the CineSuite software package unavailable unless you are directly connected to your local network. The administrator must weigh their options and decide which CineSuite features are likely to be used, and which network configuration will provide proper support for other ethernet-based equipment that may be present. Although not a major threat in most cases, the hazards of computer email viruses, Trojan horses and worms could affect the operation of all devices over ethernet. Proper care must be taken to limit exposure on any computers connected. The eCNA is not susceptible to virus infection, but the increased network activity of an infected PC would most likely slow your network to a crawl.

It is important that the SW3-7 and 3-8 DIP switches are placed in their proper positions during ethernet set up 3-7 sets the default parameters. Knowing the eCNA’s IP address and using the “Ping” command from a PC can let you quickly determine the status of your network’s hardware. Switch 3-8 configures the mainboard for either ethernet or LSN networking. If this switch is not in the proper location, ethernet functionality will be limited.

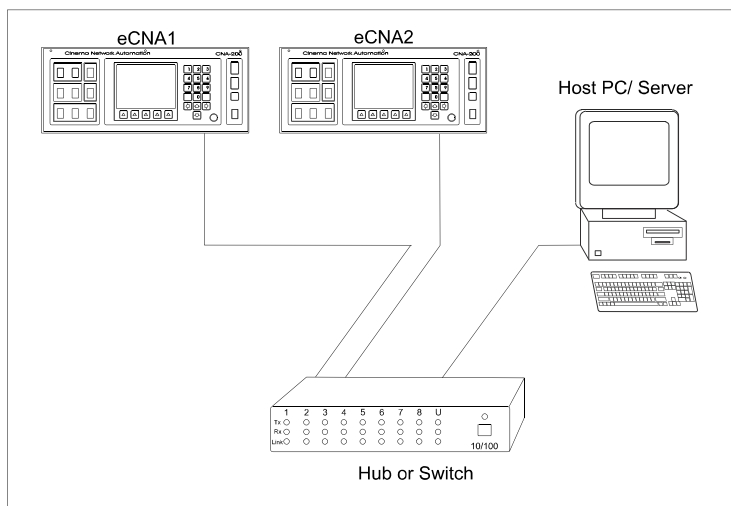
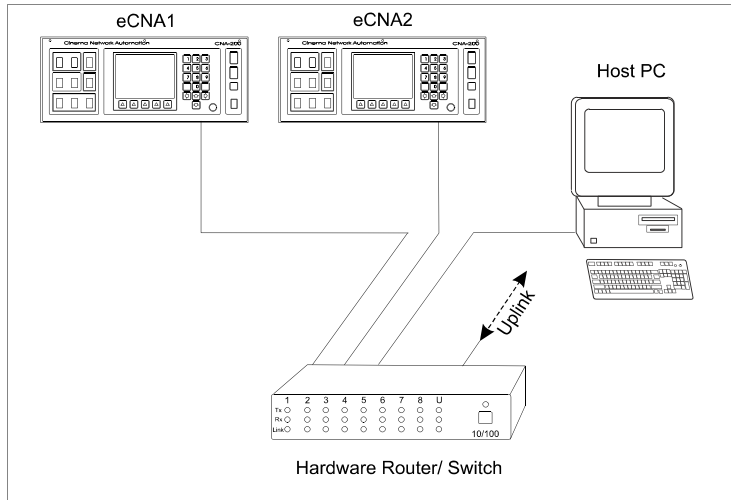


Figure 1.6

Alarm Loudness setting

The alarm loudness can be set for one of three intensities; LOW (87 dBA), MEDIUM (94 dBA), HIGH (98 dBA). See figure 1.7 below.

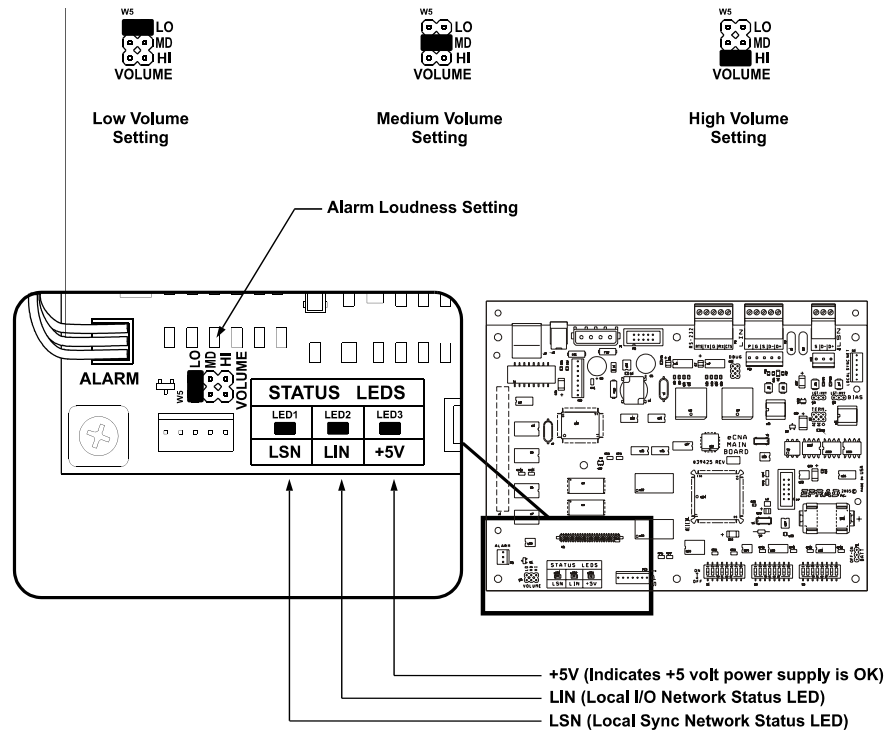


Figure 1.7

Status LEDs

There are three status LEDs on the 39425 Main CPU Board. These indicate the status of the +5 volt power supply, the LSN and the LIN. Following are the three conditions for the LIN and LSN LEDs:

Fast Blinking Rate: The eCNA-200 computer is working and is communicating properly.

Slow Blinking Rate: The eCNA-200 computer is working, but is *not* communicating.

Off: The eCNA-200 computer has a problem.

2 Setup

Introduction

STOP - Please note at this point you should have completed the entire installation of the automation system. If you have not, refer to *CNA Installation Manual*.

This section describes how to set up and customize the system to meet the specific requirements of the theatre. The initial setup will be performed by the installing engineers and can be changed only by Supervisory personnel using the high level password. A low level password allows a lower level of programming for daily operations. Generally, the day-to-day operation will require only modification of show start times or film *format* changes that occur with normal changes of feature films.

The specific topics covered in this section are as follows:

- Power up Screen
- Set-up Menu
- Set-up Supervisory
- Set-up Dimmer
- Set-up Sound
- Set-up Programs
- Set-up Cue Learn Times
- Set-up Clock Start Times
- Copy Functions
- Local Copy
- Network Copy
- Manual Control
- Network Status Screens
- Remote Monitor

Power Up Screen

Apply power to the system. The screen will display the following power-up message:

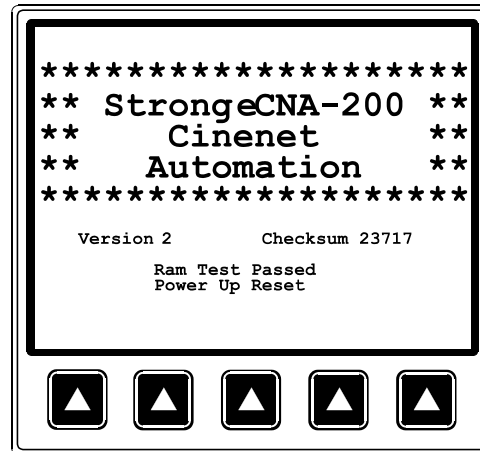


Figure 2.1

This message is displayed for five seconds each time the system is powered up. This screen indicates the software version number (i.e. Version 2.001) and the checksum number (i.e. Checksum 62633). The Checksum number is the arithmetic sum of the contents of the *firmware*, which is calculated upon each power up. This number should be recorded and posted for future reference. See Addendum for version numbers and their checksums.

Also on power up, a general purpose RAM test is performed to check the integrity of the system memory. The “RAM Test Passed” message indicates the memory is OK. There are several different methods by which the computer can be reset (or rebooted). The last message on this screen indicates the type of reset that occurred. The message “Power up Reset” is displayed each time the unit is powered up. If you see a message that is different than this, contact the factory.

Figure 2.2 shows the main screen, or the *Run Mode* screen. This screen will display run-time information during and between shows providing the user with critical feedback of show progress, film format, interlock status and fault conditions. From this screen the operator can activate or change modes of operation such as *start*, *sync* and *cue learn* mode. The *Run Mode* screen is explained in detail in the *Operation* section of the manual.

The lower section of the display is dedicated to defining the *softkeys*. These keys will change as you move to different screens in the system. The keypad to the right of the display will generally be used for entering numeric data and scrolling fields and screens.

To begin the system setup, press the MENU key.



Figure 2.2: Home

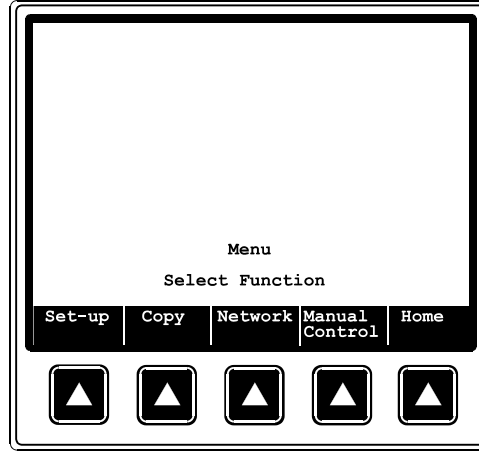


Figure 2.3: Main Menu

Figure 2.3 shows the Main Menu screen. Here, you select the function or *sub-menu*.

The following diagram shows the menu structure of the eCNA-200.

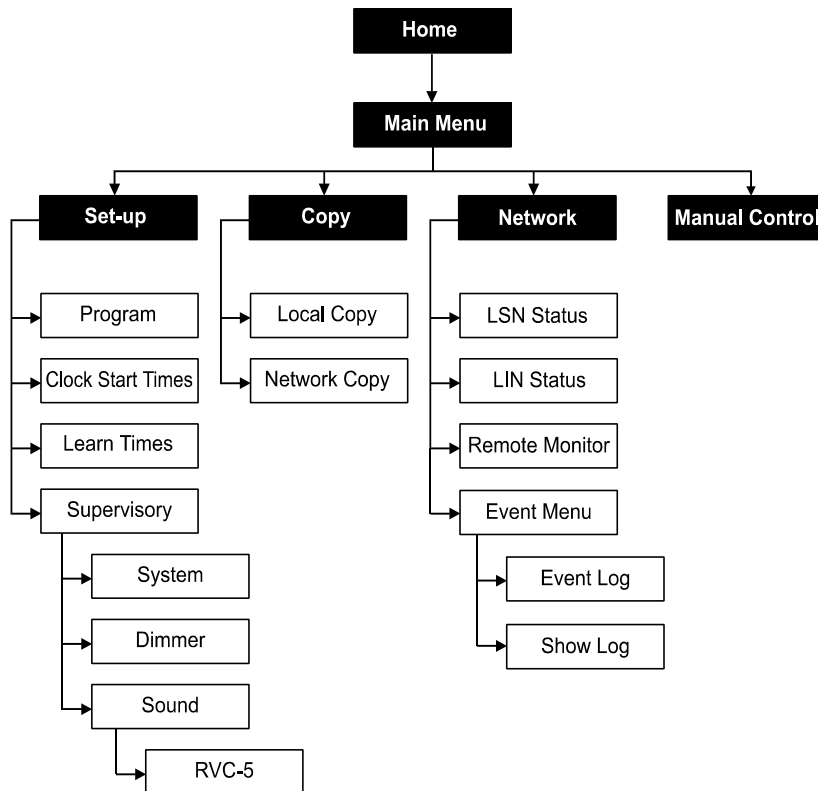


Figure 2.4

Set-up Supervisory

Supervisory is a set of system functions including relay contact configurations, power up states, maintenance schedules, interlock configurations and other system parameters. Supervisory allows the installation engineer to configure the system to support the booth and auditorium equipment.

From the main run screen, press [Menu][Set-up][Set-up Super] to enter the Supervisory screen.

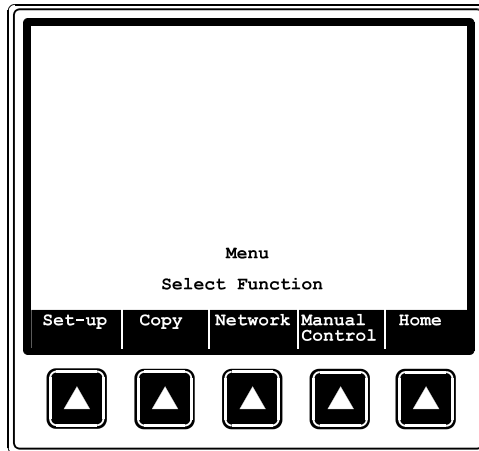


Figure 2.5

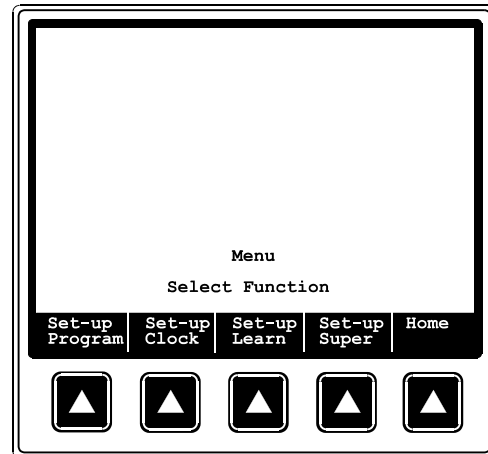


Figure 2.6

You will need to enter the *high level* password at this point to get full access to all eCNA system parameters. (Entering the *low level* password at this screen will provide limited access.)



Figure 2.7

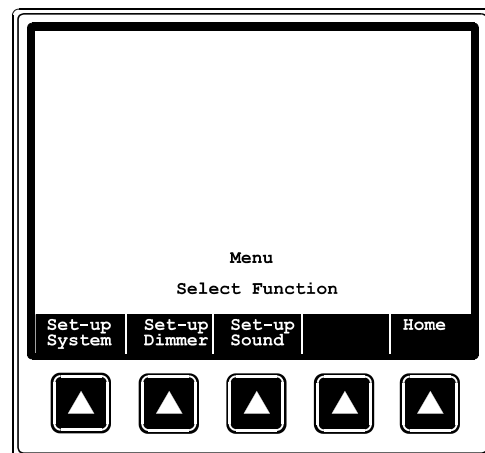


Figure 2.8



Figure 2.9

Use the [Prev Page] and [Next Page] softkeys to move to the different screens. Use the (left, right, up, down) *cursor* keys to move to different fields within each screen. The cursor will highlight the field to be edited. Edit the fields with the number keys or the [Previous and Next Message] softkeys. Moving to the next field with either the cursor keys or the *Enter* key will save the data in the previous field.

The eCNA system screens are shown below.

Page 1:

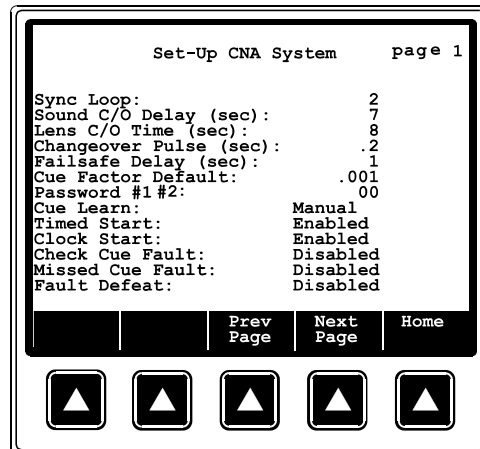


Figure 2.10: Applies to all versions.

Press the [Next Page] key to get to the second Supervisory screen. This is used to display accumulated Run Hours, Set Maintenance Schedules, Time of Day, date and 12 or 24 hour Time Format.

Page 2:

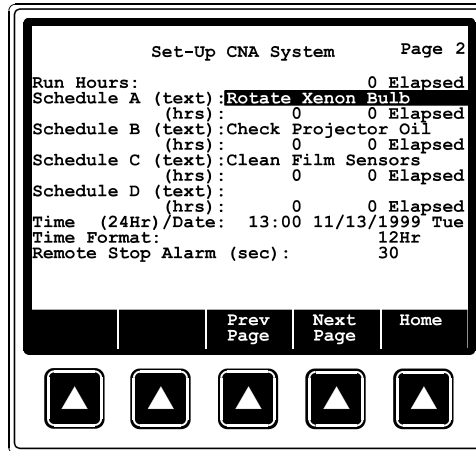


Figure 2.11

Press the [Next Page] key to get to the third screen. Use *up*, *down*, *right* and *left* cursor keys to move to the desired field. This screen is used to configure the outputs. You can customize the relay *Contacts*, *Power-up* and *Fault-to* states.

Page 3:

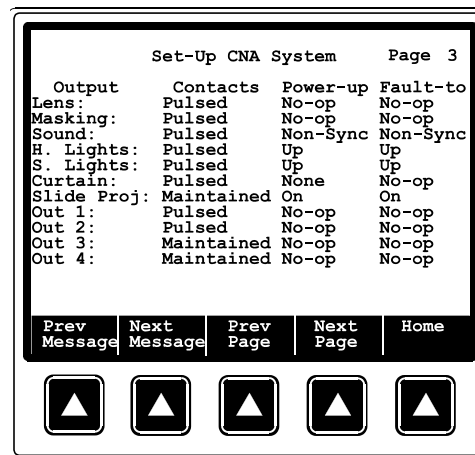


Figure 2.12

Page 4:

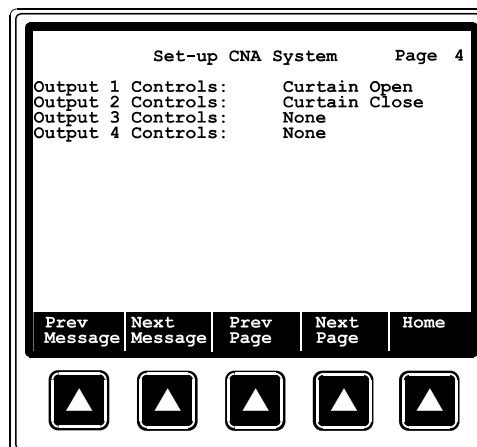


Figure 2.13

Press the [Next Page] key to go to the next Supervisory screen.

Page 5-12:

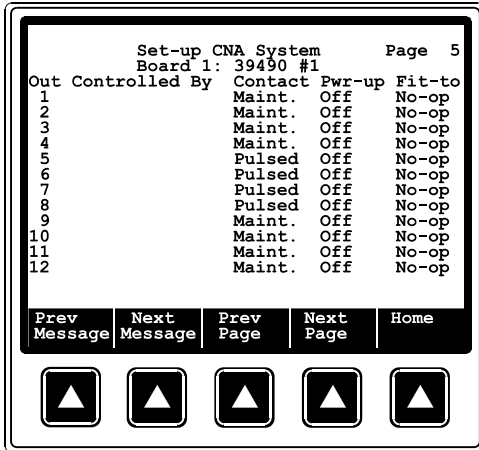


Figure 2.14

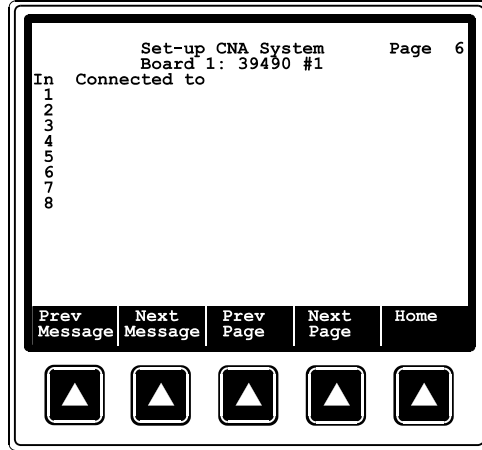


Figure 2.15

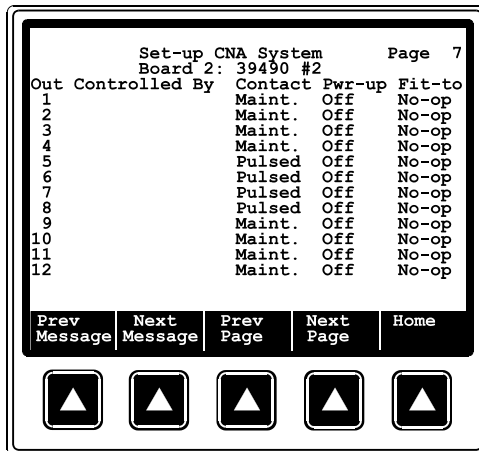


Figure 2.16

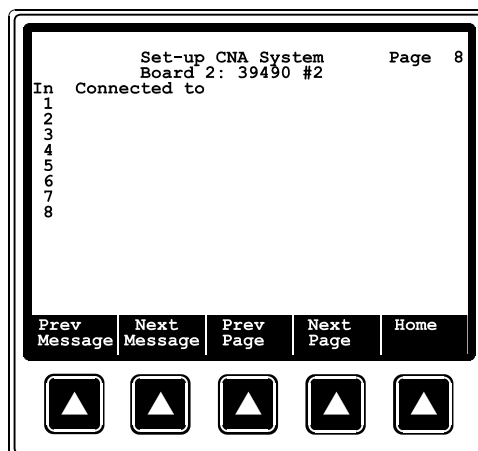


Figure 2.17

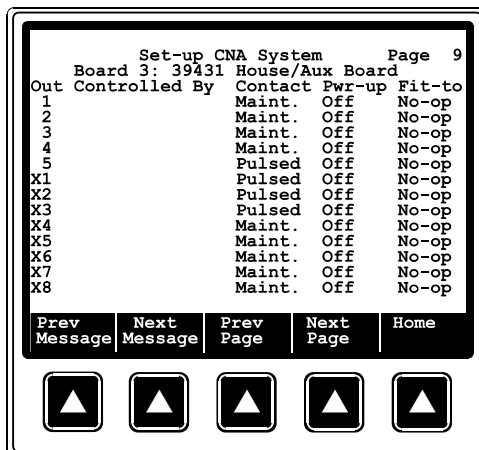


Figure 2.18

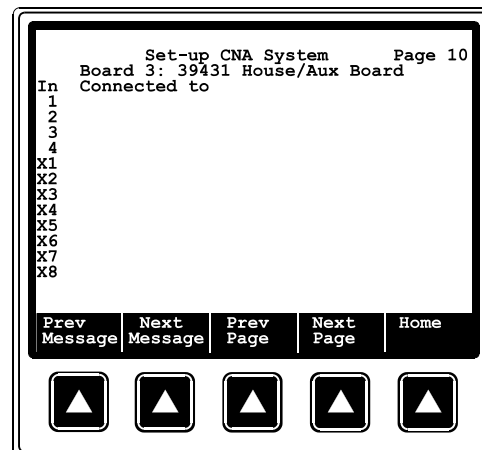


Figure 2.19

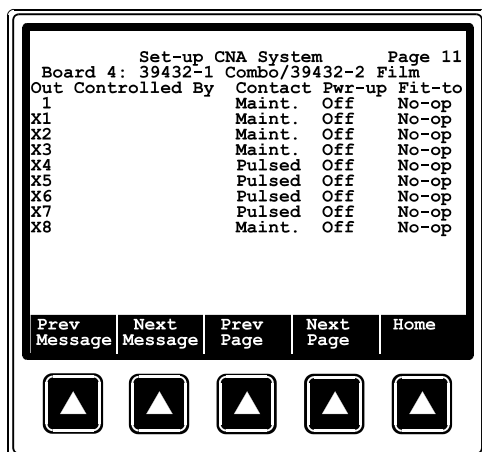


Figure 2.20

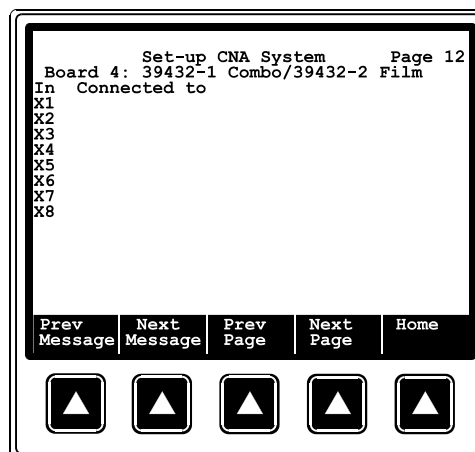


Figure 2.21

Screens 5-12 are used for configuring the 3943x termination board operation. These screens, available with firmware versions 2.008 and up, display configuration parameters for individual termination boards and combinations. See description below for further information.

When editing the *numeric* data fields, there may be values that are out of range. If you enter an out range value and then try to move to the next field, the screen will display either a **DATA RANGE TOO HIGH** or **DATA RANGE TOO LOW** message. Entering a legal value will clear the message and allow you to move to the next field.

The following is a list of eCNA system Supervisory functions and definitions.

Sync Loop: 1

The eCNA-200 automation *LSN* is capable of supporting up to twenty (20) sync loops at one time. The Sync Loop number assigns the automation to one of twenty sync loops. This function can be accessed with either password. Legal entries are 0 through 20. 0 disables the system from the *Local Synchronous Network* (LSN) and synchronous operation. Enter the data with the number keys.

Sound C/O Delay (sec): 3

The sound changeover delay determines the delay time between the show start input and the sound changeover from the *non-sync* music source. For example, with the Sound C/O Delay set at 5, five seconds after the show starts the changeover will open. And five seconds after the last (end of show) cue is encountered the changeover will close. The legal range is 3 to 59 seconds.

Lens C/O Delay (sec): 5

This represents the time required for the lens turret to change positions from flat to scope. It is the time the changeover will remain closed during lens changes. The result is a black screen. To determine the desired value, simply time the lens turret and add 1 second. The legal range is 0 to 9 seconds. 0 disables the function. Enter data with the number keys.

Changeover Pulse (sec): .2

This setting controls the duration or width of the pulse sent to the changeover. It is recommended that the Changeover Pulse be set to the minimum value that allows the changeover to complete its full stroke. The legal values are .1 to 1.0 seconds. Enter data with the number keys.

Failsafe Delay (sec): 2

This function is a film *bobble* delay designed to prevent premature shutdown caused by platter or other types of rewind and film transport equipment during startup or any other portion of the presentation. Anytime the failsafe does not sense film presence during a presentation the Failsafe Delay timer is started, if film is detected before the timer expires, the presentation is not shutdown. If, however, film is not detected before the timer expires, the presentation is stopped and the alarm will sound. Legal entries range from 1 to 10 seconds. Enter data with the number keys.

Cue Factor Default: .002

This function is used in conjunction with eCNA-200 *Cue Learn* system. The system learns the cue locations the first time a presentation is shown and places a “window”, based on the Cue Factor number. In the event of a missed cue, the eCNA-200 maintains the proper timing of events by automatically inserting a cue at the end of the window.

Simply put, the cue window time is the *Cue Factor* multiplied by the *Cue Time*. For example, if The Cue Factor Default is .001 and the cue occurs 50 minutes into the presentation, the size of the window is: $.001 \times 50 = .05$ minutes or $(.05 \times 60)$ 3 seconds. Remember, the time of each window is based on the distance the cue is from the beginning of the film. So it follows that the further the cue is from the beginning of the film, the larger the window will be. Based on this, select a Cue Factor you can live with. For an average length movie, a Cue Factor Default setting of .002 is good.

Note: For more information see *Cue Window Factor* later in this manual.

Password #1, #2: 12

This function sets the *low level* or projectionists' password. Password #1 allows access to the Sync Loop number in Supervisory, Clock Start Times, Programs (format instruction only) and Cue Learn Times. It allows the projectionist to access the functions necessary to perform the job, while maintaining protection of the high level information. Legal entries are 00 through 99. Enter data with the number keys. The high level password, Password #2 allows full access to program changes and other sensitive operating parameters. This can be any value from 0000 to 9999, it is entered in the same manner as the low level password described above.

Cue Learn: Manual

This setting allows the Cue Learn Mode to be *manually* or *automatically* terminated at the end of the first presentation. In the Manual mode the operator is required to manually de-activate the Cue Learn Mode by pressing the Learn Mode key after the first presentation is completed. In the Auto mode the eCNA-200 assumes that all cues were in their proper location and the presentation went as planned. At the end of the first presentation the eCNA-200 will automatically de-activate the Cue Learn Mode. The entries are **Auto** and **Manual**. Toggle the message with the Select Message key.

Timed Start: Enabled

This function controls access to the timed autostart function. The entries are **Enabled** and **Disabled**. When Timed Start is disabled the operator can not access the Time Start feature. Toggle the messages with the Select Message key.

Clock Start: Enabled

This function controls access to the clock autostart function. The entries are **Enabled** and **Disabled**. When Clock Start is disabled the operator can not access the Clock Start feature. Toggle the messages with the Select Message key.

Check Cue Fault: Disabled

When using the system Cue Learn mode feature there is a fault message that is displayed after running the presentation in *Learn* mode. The message “CHECK CUE LEARN TIMES” is displayed as a reminder to the operator to verify the cue times after the first show. This message can be suppressed by setting it to Disabled. Toggle the message with the Select Message key. See *Cue Learn Mode* later in this manual.

Missed Cue Fault: Disabled

When using the system Cue Learn mode feature there is a fault message that is displayed after running the presentation in *Learned* mode. For example, the message “MISSED CUE 3” will be displayed if the system did not see cue foil 3 during the show. This message can be suppressed for those theatres that do not use cue foil on the film, or for some other reason do not want to see this fault message. Toggle the message with the Select Message key. See *Cue Learn Mode* later in this manual for more information.

Fault Defeat: Disabled

This function allows the operator to *bypass* the Film Presence, Film Motion, Film Tension and Xenon Fault inputs. This would normally be used only for testing purposes, not for normal operation. When Fault Defeat is set for Enabled, all the fault inputs are *bypassed*. When set for Enabled, the message “FAULT DEFEAT ENABLED” will be displayed as a reminder to the operator. The selections are Enabled and Disabled. Toggle the message with the Select Message key.

Run Hours: 12345 Elapsed

This is a status only field, showing the number of hours the system has been running. It represents the accumulated time the projector has been operating. The elapsed time may be reset by entering 1 2 3 4 CLEAR.

Schedule A,B,C,D (hrs): 150 50 Elapsed

These are four timed schedules which allow the setting of a timer (in hours) which will notify the operator each time the elapse time reaches the *set point*. For example, if Schedule A is set at 100 hours, the operator would be notified at 100 hour intervals. The message “MAINTENANCE SCHEDULE A FAULT” is displayed on all screens. The Elapsed timer must be reset to 0 in Supervisory by

pressing 1 2 3 4 CLEAR with the cursor on the Elapsed time field. This will clear the fault message. Setting the set point to 0 disables the Maintenance Schedule fault message.

This operation also allows a 22 character message to be attached to each maintenance schedule. The messages are programmed from the Host computer and are displayed in the eCNA system supervisory.

These timers are most commonly used to drive periodic maintenance or keep track of specific equipment life such as the xenon bulb. The set point range is 1 to 65535 hours. Data entry is made with the number keys.

Time of Day (24Hr): 14:30 3/21/1997 Fri

This function is used to set the internal clock. Enter the time in a 24 hour format. Cursor right to edit the Month, Day, Year and Day of week.

Time Format: 12Hr

The clock can be set for either the 12 or 24 hour format. Toggle the message with the Select Message key.

Remote Stop Alarm (sec): 30

This function serves as a remote network alarm. When set to a non-zero time the alarm will pulse (for the programmed time) if another CNA automation on the network has faulted. Setting the time to 0 will disable this feature. Setting the time to 99 will sound the alarm until the alarm is canceled at the CNA that caused the fault or a Remote Monitor.

Output Configuration

Screens 3-12 are used to configure the relay outputs. Most outputs can be configured for pulsed or maintained contacts, power-up state and fault-to state.

Output	Contacts	Power-up	Fault-to
Lens:	Pulsed	No-op	No-op
Masking:	Pulsed	No-op	No-op
Sound:	Pulsed	Non-Sync	Non-Sync
H. Lights:	Pulsed	Up	Up
S. Lights:	Pulsed	Up	Up
Curtain:	Pulsed	No-op	No-op
Slide Proj:	<i>Maintained</i>	Off	Off
Out 1:	Pulsed	Off	Off
Out 2:	Pulsed	Off	Off
Out 3:	Pulsed	Off	Off
Out 4:	Pulsed	Off	Off

The fields shown in italics cannot be edited. The contacts can be set for pulsed or maintained. The Power-up fields determine the power-up states of the outputs, and the Fault-to fields determine what the output will do on a fault condition. The legal values for lights are Up, Down, Mid 1 and Mid 2 and no-op. The legal values the curtain are Open, Close, None and No-op. Legal values for the lens

and masking are None, special, scope, flat, and no-op. And the legal entries for the rest are On, Off and No-op.

This screen allows the user to configure Out 1, Out 2, Out 3 and Out 4 auxiliary outputs to drive any spare relays that may be available. At this time the “spare relays” supported are as follows:

None (disabled)	Lens Special	Sound Digital 1
Curtain Close	Mask Flat *	Sound Digital 2 *
Curtain Open	Mask Scope *	Sound Mono
Environment *	Mask Special *	Sound Mute
House Down	Preamp 1 *	Sound Non-Sync
House Mid 1	Preamp 2 *	Sound SR
House Mid 2	Slide Proj B *	Sound SVA
House Up	Slide Proj C	Stage Down
Lens Flat	Sound Aux 1	Stage Up
Lens Scope	Sound Aux 2 *	* Requires 39331 Booth Termination board.

For example, the Curtain Open and Close relays can be re-directed to Out 1 and Out 2. Press [Prev Message] or [Next Message] to scroll through the list of relays. Use the “Aux” instruction in a program to control the outputs. Use the “Aux Out” selections on the Manual Control screen to manually operate Out 1, Out 2, Out 3 and Out 4.

Screens 5-12 provide a means for controlling the 3943x termination board outputs, the same options of contact, Power-up and Fault-to states are provided for each output as well as a field dictating which control command effects that output. The command options are:

Digital Projector 1	Digital Projector 2	General
DP1 Pwr Off	DP2 Pwr Off	In Progress
DP1 Pwr On	DP2 Pwr On	Fault
DP1 Vid Off	DP2 Vid Off	Fire Stop
DP1 Vid On	DP2 Vid On	

Each output can be configured to toggle based on the above conditions.

The 3943x termination board Inputs can be assigned functions as well:

Digital 1 Cue	Digital 2 Cue
Digital 1 Fault	Digital 2 Fault
Digital 1 Stop	Digital 2 Stop
Digital 1 Start	Digital 2 Start

Page 5 of the Supervisory is used to configure the board 1 Pn#39490 termination, Page 6 is used to configure the 8 auxiliary input channels on the 39490. Page 7 is used to configure the board 2 Pn# 39490 #2 termination outputs, Page 8 is used to configure the 39490 #2 inputs. Page 9 is used to configure board 3 the 39431 House/Aux board outputs, page 10 configures the board 3 #39431 House/Aux board inputs. Page 11 is used to configure the 39432-1 Combo/ 39432-2 Film board outputs. Page 12 is used to configure the 39432-1 Combo/ 39432-2 Film board inputs.

Ethernet Options

Supervisory screen 13 displays the configuration parameters for the eCNA-200's ethernet connection. Here your ethernet mode can be configured for Half Duplex or Full Duplex, the IP address, Subnet Mask, and Gateway IP can be assigned according to your LAN requirements. Changes made on this menu are not implemented until power is cycled.

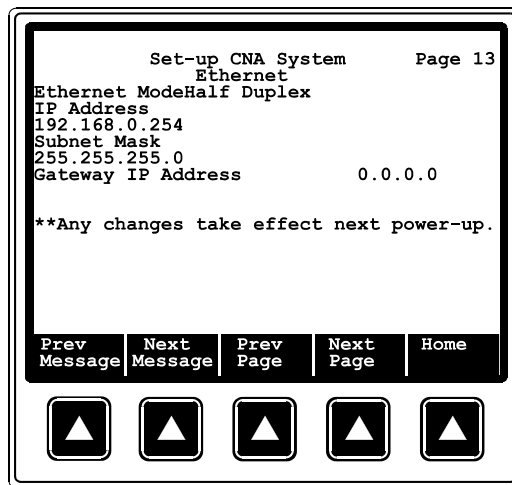


Figure 2.22

Network Class	Host Bits	Subnet Mask
A	24	255.0.0.0
B	16	255.255.0.0
C	8	255.255.255.0

Once all parameters are configured according to your requirements, this menu may be exited by pressing the “Home” softkey at the bottom right on your display.

Set-up Dimmer

eCNA-200 software and the QDC-400 Dimmer Control Board is required for this procedure. The eCNA-200 and QDC-400 Dimmer Control board allow the user to configure lighting scenes.

Note: Before beginning be sure the QDC-400 Control board, dimmer power modules and lights are wired and tested.

Enter the dimmer set-up screens by pressing [Set-up Dimmer] from the Set-up Supervisory menu. Enter the password to gain access.

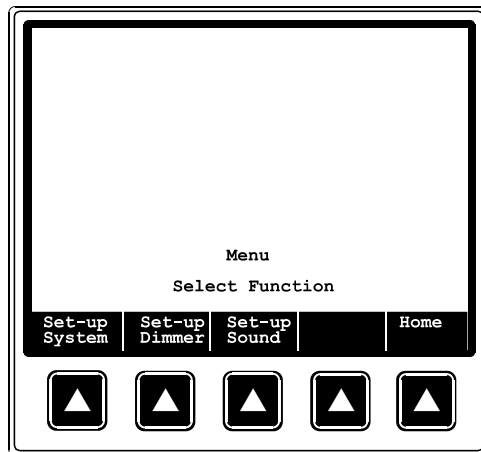


Figure 2.23: Press Set-up Dimmer.



Figure 2.24: Enter high level Password.

The QDC-400 is a four channel dimmer and each channel must be appropriately set to either “House”, “Stage” or “None”. *Note: Any additional selections are only used for light show programs, which are not yet available.* How these are configured will be determined by the “physical” wiring of the dimmer power modules and lights.

The eCNA-200 currently supports up to four QDC-400 Dimmer Control cards. The channels are assigned to the dimmer cards as follows:

Dimmer Card 1:	Channel 1, 2, 3, 4
Dimmer Card 2:	Channel 5, 6, 7, 8
Dimmer Card 3:	Channel 9, 10, 11, 12
Dimmer Card 4:	Channel 13, 14, 15, 16

With the cursor on the channel field, enter the number of the channel you want to edit or press the [Prev Page] and [Next Page] keys.



Figure 2.25: Select channel to edit.

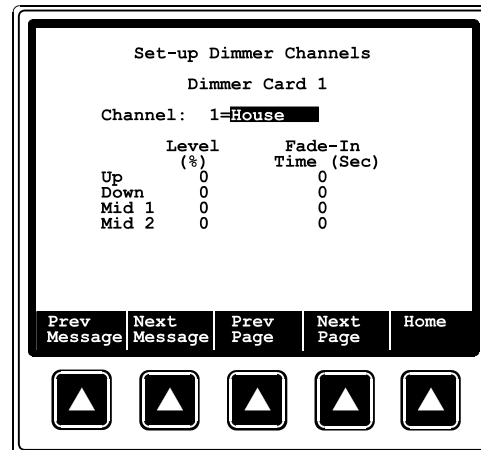


Figure 2.26: Select zone.

Scroll right to the “zone” field and select either House, Stage or None with the [Prev Message] and [Next Message] keys. This field contains a list of 16 zones and None (disabled). Two of the zones are defined as House and Stage. The selections in the list are as follows:

None	ZONE 9
House	ZONE 10
Stage	ZONE 11
ZONE 3	ZONE 12
ZONE 4	ZONE 13
ZONE 5	ZONE 14
ZONE 6	ZONE 15
ZONE 7	ZONE 16
ZONE 8	

Software causes lighting zones 3-16 to turn off in the event of loss of LIN communications. These outputs will remain in their current state however if a firestop is encountered.

At power up, zones 3-16 resume their previous states, stopping a show will not affect their current state.

Use the cursor keys to move to the Level and Fade-In Time fields. Enter the desired values for each with the number keys. The fade-in time controls how long it takes the lights to ramp to a new level. Legal values for level are 0 to 100%. Legal values for fade-in time are 0 to 99 seconds. See the *QDC-400 Dimmer Controller* manual for more detail on installing and setting up the dimmer.

Set-up Sound

Selecting the “Set-up Sound” supervisory key will allow the set-up of the RVC-5 volume control accessory. To access the RVC-5's settings you must enter the #2 high level password.

The option of RVC-5 Enabled or Disabled is given along with Output 1 and 2 selections offering Eprad DSS, Sony DFP-D3000, Dolby CP65 Dolby CP500 and Ultra Stereo JS-200. (The enabling/Disabling of the RVC-5 also affects access to the Volume level parameter in the Manual control menu). This function will only be used when a RVC-5 (PN 39370) accessory is used on either the single or booth termination board (PN 39332 or 39331).

Note: See RVC-5 installation manual for more information on this subject

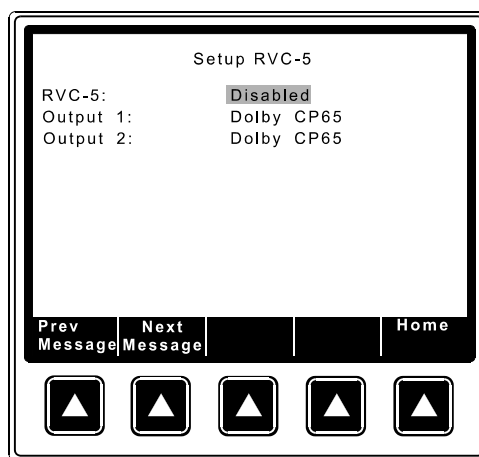


Figure 2.27

Set-up Programs

The engineer/operator can program up to nine (9) individual programs. Each program may contain up to 99 lines or steps of instructions. In this section the procedures and rules for the program functions are covered.

The eCNA-200 is a *cue-driven* automation. This means that events, such as lens, masking and sound changes, are initiated by a cue (normally foil placed on the film). These events are stored in the eCNA-200's memory and are called *programs*. The eCNA-200 gives you the ability to build and store up to nine different programs. Each program can contain up to ninety-nine *instructions* which are performed sequentially. An instruction is a particular function that will be executed during a *program step*. It may have a timed relationship to the step; that is, stage lights may be programmed to dim ten seconds after the instruction is encountered in the program. Each instruction is identified by an *instruction number*. Figure 2.19 shows the relationship of the cues and the segments of a program in which events are initiated by the automation. Figure 2.19 also shows a typical program segment and the components that make it up.

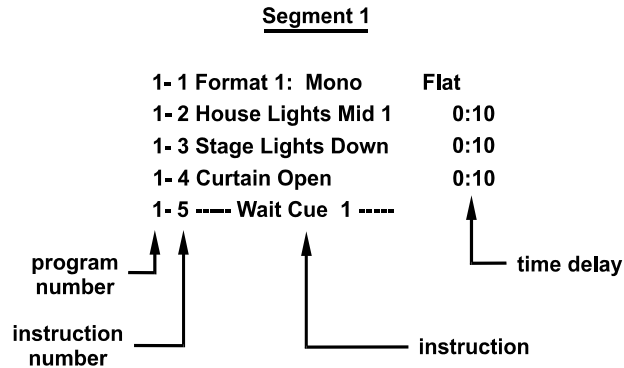



Figure 2.28

The parts of a program are defined below:

Program number This number is the program you are viewing or editing. You can build and save up to nine different programs.

Instruction number Each instruction in a program has a step number. Each program can contain up to ninety-nine (99) instruction steps.

Instruction A program is made up of a sequence of commands called instructions that are designed to execute a specific function. There are currently thirty unique instructions available.

Time delay Many of the instructions allow a time delayed execution.

Program Instructions

There are 34 program instructions that allow the user to customize the presentation. These instructions can be used to control and manipulate the following:

House and Stage Lighting

- Curtains
- Slide Projector
- Cue Factor
- Film Sound and Lens Formats
- Number of Cues
- Time Delays
- Projector Control
- Intermissions

House Lights

- | | | |
|---|--------------------|----------------------------------|
| 1 | House Lights Up | 00:00 to 59:59 (minutes:seconds) |
| 2 | House Lights Down | 00:00 to 59:59 (minutes:seconds) |
| 3 | House Lights Mid 1 | 00:00 to 59:59 (minutes:seconds) |
| 4 | House Lights Mid 2 | 00:00 to 59:59 (minutes:seconds) |
| 5 | House Lights None | 00:00 to 59:59 (minutes:seconds) |

Each of these instructions operate in the same manner to control the four House Light outputs. House Lights None would normally only be used when contacts are configured for *Maintained*. A single timer is used to implement these five instructions. Execution of the instruction simply sets and starts the timer. When the timer times out (counts down to zero) the output is set to the desired state. When the outputs are configured for *Pulsed*, a transition to the *on* state will cause the output to occur. Control immediately interprets the next instruction in the list. The time is specified in minutes and seconds.

Note: Executing one of these instructions again (before the timer times out) simply overrides the previous instruction.

Stage Lights

- | | | |
|---|-------------------|----------------------------------|
| 6 | Stage Lights Up | 00:00 to 59:59 (minutes:seconds) |
| 7 | Stage Lights Down | 00:00 to 59:59 (minutes:seconds) |
| 8 | Stage Lights None | 00:00 to 59:59 (minutes:seconds) |

This set of instructions each operate in the same manner to control the two Stage light outputs. A single timer is used to implement these three instructions. Execution of the instruction simply sets and starts the timer. When the timer times out (counts down to zero) the output is set to the desired state. When the outputs are configured for *Pulsed*, a transition to the *on* state will cause the pulse to occur. Control immediately interprets the next instruction in the list. The time is specified in minutes and seconds.

Executing one of these instructions again (before the timer times out) simply overrides the previous instruction.

Curtain

- | | | |
|----|---------------------|----------------------------------|
| 9 | Curtain Open | 00:00 to 59:59 (minutes:seconds) |
| 10 | Curtain Close | 00:00 to 59:59 (minutes:seconds) |
| 11 | Curtain None | 00:00 to 59:59 (minutes:seconds) |
| 12 | Curtain Call | 00:00 to 59:59 (minutes:seconds) |
| 13 | Curtain Close Early | 00:00 to 59:59 (minutes:seconds) |

Curtain Open, Curtain Close and Curtain None each operate to control the curtain open and close outputs. A single timer is used to implement these instructions. Execution of the instruction simply sets and starts the timer. Later, when the timer times out the output are set to the desired states. Control immediately interprets the next instruction on the list. The time is in minutes and seconds.

Executing one of these instructions again (before the timer times out) simply overrides the previous instruction.

Curtain Call is a special instruction that is active only when running in the *Learned Mode*. Based on the learned time of the next film cue, the instruction calculates the time before that cue and executes a curtain close output. Upon reading that cue the curtain will reopen. For example, with the Curtain Call is set for a time of 10 seconds the curtain will start to close 10 seconds before the next cue is read. When the cue is read the curtains will begin to open. This instruction can be used to close the curtain at the end of a trailer and then reopen the curtain at the beginning of the main feature. Time is specified in minutes and seconds and should be set 2 to 5 seconds longer than the time required for the curtain to fully close. Control immediately interprets the next instruction on the list.

Curtain Close Early is another special instruction that is only active in the *Learned Mode*. The curtain will close prior to the last cue. The amount of time set determines how *early* the curtain closes. This could be used to synchronize the curtain closing with the changeover to prevent the audience from seeing a “white” screen at the end of the presentation.

Slide Projector

- 14 Slide Projector On 00:00 to 59:59 (minutes:seconds)
- 15 Slide Projector Off 00:00 to 59:59 (minutes:seconds)

This set of instructions operate to control the Slide Projector output. A single timer controls these instructions. Executing one of these instructions sets and starts the timer. Executing one of these instructions again (before the timer times out) overrides the previous instruction. Time is specified in minutes and seconds. Data entry is made with the number keys

Cue Factor

- 16 Cue Factor .000 to .999

This instruction overrides the Cue Factor Default (Supervisory function) for the remainder of the program and adjusts the cue window accordingly. Control immediately interprets the next instruction on the list. Data entry is made with the number keys.

Film Format

- 17 Format 1: Sound Lens

This instruction allows the film format parameters to be selected. The changeover occurs as defined in supervisory function. System immediately interprets next instruction on the list. Sound selections include: Non-Sync; Mono; SVA; SR; Dig 1; Aux 1; Dig 2; Aux 2. Aux 1 and 2 can be used for any desired function i.e. a mute, synthesized stereo, magnetic, special types of noise reduction. Lens selections include: Flat; Scope; Special. The legal range for the format number comment is 0 to 20.

Wait Cue

- 18 --- Wait Cue --- 0 to 20

This instruction causes the program to wait for one of the following:

In the *Learn Mode* (Cue Learn active):

1. A film cue
2. Cue input (key)
3. Failsafe (end of film) when last cue is expected by program

In the *Learned Mode* (Cue Learn not active):

1. A film cue within learned cue window
2. Cue input (key)
3. Failsafe (end of film) within last cue window

The failsafe can be used as the last cue if a failsafe shutdown is desired.

Control immediately executes next instruction on the list. Data entry is made with the number keys.

Shutdown Delay

19 Shutdown Delay 00:00 to 59:59 (minutes:seconds)

This instruction extends the normal shut down time of the projector motor in the time specified. Shutdown Delay overrides the *global* end of show timer. This can be used to allow film to clear the projector before shut down. Time is specified in minutes and seconds.

Wait

20 --- Wait --- 00:00 to 99:99 (minutes:seconds)

This instruction causes a delay for the specified time in minutes and seconds. When the Wait instruction is encountered in a program the timer starts to “tick”. No other instructions in the program are executed until the timer times out /counts down to zero. This instruction, for example, can be used with the Curtain instructions to perform a “curtain call” or for special intermission features.

A manual cue input or a film cue will abort this instruction and control will immediately execute the next instruction on the list. If used during an intermission, a start input will abort the Wait instruction.

When the time is set to the maximum value of 99:99 the instruction waits indefinitely. A RESUME or remote RESUME will terminate the wait and continue the program.

A cue key or remote cue from the cue detector will terminate the wait and execute the next Wait Cue instruction

Changeover

21 Changeover Open 00:00 to 59:59 (minutes:seconds)
 22 Changeover Close 00:00 to 59:59 (minutes:seconds)
 23 Changeover None 00:00 to 59:59 (minutes:seconds)
 24 Changeover Auto 00:00 to 59:59 (minutes:seconds)

The *Sound Changeover* is normally handled automatically by the control. This set of instructions is very powerful and provides the user with more control of the Sound Changeover outputs. Time is specified in minutes and seconds.

Using the Changeover Open, Changeover Close and Changeover None instructions in a program simply override the *automatic* Sound Changeover *logic*, with the exception of a film break.

Use the Changeover None to suppress the automatic open or close of the changeover. Use the Changeover Open and Changeover Close to control the Changeover outputs as desired.

Use the Changeover Auto to return control of the Sound Changeover back to the *automatic* changeover open and close *logic*.

The **delay time** can be used to delay the execution of the instruction by the amount specified. For example if you want the changeover to close, and then re-open after 8 seconds, you would use the instructions as follows:

```
1-10  Changeover Close    0:00
1-11  Changeover Open     0:08
```

Enter time with number keys.

Projector Motor/Lamp

```
25    Projector Motor/Lamp On
26    Projector Motor/Lamp Off
```

The Projector Motor/Lamp On instruction turns *on* the projector motor and xenon lamp but does not initiate automatic show start logic (changeover open, etc.). A "Wait Cue" instruction (and a film cue) is required to initiate show start logic.

The Projector Motor/Lamp Off instruction causes the projector motor and xenon lamp to turn *off* using the normal show end timers and closes the changeover. This instruction can also be used to keep the projector motor from coming on at the beginning of a show.

Intermission Wait

```
27    Intermission Wait          00:00 to 99:99 (minutes:seconds)
```

This instruction is used for intermissions and other special applications. This instruction automatically switches the system to non-sync sound and initializes the projector motor shutdown. The changeover is closed with the normal delay. Shutdown is maintained until the programmed time is expired or a RESUME is received. This instruction requires a Wait Cue instruction (and a film cue) to initiate the *show start logic*.

When the time is set to the maximum value of 99:99 the instruction waits indefinitely. A RESUME or remote RESUME will terminate the wait and continue the program.

Aux

28 **Aux [Out *d*] [On/Off/No-op]** 00:00 to 99:99 (minutes:seconds)

This instruction controls the four auxiliary outputs.

Out *d* Select Out 1, Out 2, Out 3 or Out 4 with the [Prev Message] and [Next Message] keys.

On This selection causes transition to the *on* state.
Off This selection causes transition to the *off* state.
No-op This selection causes the output to do nothing at all!

A timer is used to implement this instruction. Execution of the instruction simply sets and starts the timer. When the timer times out (counts down to zero) the output is set to the desired state. Control immediately interprets the next instruction in the list. The time is specified in minutes and seconds.

Note: Executing the same instruction again (before the timer times out) simply overrides the previous instruction.

Volume, Fade Time

29 **Volume [+/-*dd.d*]dB Fade Time [*nn*]** 00:00 to 99:99 (minutes:seconds)

+/-*dd.d* Specifies the volume level in decibels referenced to '0' dB.

nn Specifies the fade time in seconds.

Volume in the auditorium can be controlled automatically by using the volume instruction. Enter the volume level with the number keys and change the number to positive or negative with the +/- key. Fade time is defined as how many seconds it will take to *ramp* to the new sound level. Enter the fade time with the number keys. The volume instruction has a level range of -50.0dB to +10.0dB and a fade time range of 0 to 10 seconds.

Enter volume instructions for each cue as required. Just like any other instruction, the volume instruction can be added anywhere in a program and must be separated by a Wait Cue or Wait timer instruction.

Lights

30 **Type, [house, stage, zone 3-16] level, [up, down, mid1, mid2] and delay time. [*nn*]**
 00:00 to 59:59

Selecting this operation lets the programmer chose house, stage, and zones 3-16 Chose up, down, mid1, and mid2. And select delay times.

Sound

31 **Select, Non-sync, Mono, SVA, SR, Dig1, Aux1, Dig2, Aux2, Mute off, Mute on.**
 32 **Type, Flat, Scope, Special**

Lens33 **Type**, Flat, Scope, Special**Masking**34 **Type**, Flat, Scope, Special**Projector**35 **Options**, Film, Changeover, Digital Proj 1 and Digital Proj 2

Instruction 35 is used to control and coordinate multiple projectors. The Film On/Off command controls the Projector Motor and Xenon Lamp functions on the 39330, 39332, 39432-1, and the 39432-2 boards. The Changeover Open/Close function controls the changeover on the 39330, 39332, 39432-1 and the 39432-2 boards. Digital Power On/Off, Digital Vid On/Off for Proj 1 and 2 are used to control the auxiliary outputs 1 through 4. These outputs can be used to control the video mute and the lamp power on digital projectors. The time variable is a delay parameter.

The following table summarizes the 35 Program Instructions available with your eCNA-200.

No.	Instructions	Range
1	House Lights Up	0:00 to 59:59
2	House Lights Down	0:00 to 59:59
3	House Lights Mid 1	0:00 to 59:59
4	House Lights Mid 2	0:00 to 59:59
5	House Lights None	0:00 to 59:59
6	Stage Lights Up	0:00 to 59:59
7	Stage Lights Down	0:00 to 59:59
8	Stage Lights None	0:00 to 59:59
9	Curtain open	0:00 to 59:59
10	Curtain Close	0:00 to 59:59
11	Curtain None	0:00 to 59:59
12	Curtain Call	0:00 to 59:59
13	Curtain Close Early	0:00 to 59:59
14	Slide Projector On	0:00 to 59:59
15	Slide Projector Off	0:00 to 59:59
16	Cue Factor	.000 to .999
17	Format : Sound Lens	Non-Sync;Mono;SVA;SR; Dig 1;Aux 1;Dig 2;Aux2 Flat;Scope;Special
18	Wait Cue	0 to 20
19	Shutdown Delay	0:00 to 59:59
20	Wait	0:00 to 99:99
21	Changeover Open	0:00 to 59:59
22	Changeover Close	0:00 to 59:59

23	Changeover None	0:00 to 59:59
24	Changeover Auto	0:00 to 59:59
25	Projector Motor/Lamp On	N/A
26	Projector Motor/Lamp Off	N/A
27	Intermission Wait	0:00 to 99:99
28	Aux	0:00 to 99:99
29	Volume, Fade Time	0:00 to 99:99
30	lights, type level, delay	0:00 to 59:59
31	sound	non-sync, mono,sva, sr, dig 1
32	lens/ masking	flat, scope, special
33	Lens	flat, scope, special
34	masking	flat, scope, special
35	Projector Film Off/On Changeover Close/open Digital 1 Power Off/On Digital 1 Vid Off/On Digital 2 Power Off/On Digital 2 Vid Off/On	0:00-59:59

Program Operation

The eCNA-200 is a *cue-driven* automation. This means that events, such as lens, masking and sound changes, are initiated by a cue (normally foil placed on the film). These events are stored in the eCNA-200's memory and are called **programs**. The eCNA-200 gives you the ability to build and store up to nine different programs. Each program can contain up to ninety-nine **instructions** which are performed sequentially. An **instruction** is a particular function that will be executed during a *program step*. It may have a timed relationship to the step; that is, stage lights may be programmed to dim ten seconds after the instruction is encountered in the program. Each function is identified by an *instruction number*

A **Program** is a series of events that the system will perform in the order in which those instructions are encountered in a Program list. Most instructions have timers that determine when the actual event will take place in relation to when the instructions is encountered. For example, when the "House Lights Down 0:30" instruction is encountered; the system understands this instruction, and proceeds to the next instruction on the list. 30 seconds later the house lights will go down.

Important Program Instructions are: Format, Wait Cue, and Wait.

Format: Format configuration will be displayed when the system is running a film presentation, show the type of sound, lens, and projector speed used. Up to 10 different Format instructions can be used during a program.

Wait Cue: The run input can be thought of as a first cue that starts the program. All instructions are executed until the first WAIT CUE is encountered. The cue may be from the cue detector assembly or from the Cue Input key. The system will then perform the next set of instructions on the list up to the next WAIT CUE instruction. When the last WAIT CUE instruction in the program list is encountered, the system will perform the End of Show functions (changeover close, sound to non-sync, etc.). A maximum of twenty cues may be encountered in a Program.

Wait: Halts the execution of any program instructions for a prescribed period of time in minutes and seconds. WAIT may be used in a Program during a film portion of the program, as well as after the film to initiate programmed intermission functions. After the programmed time has expired, the system performs the next instruction on the list. WAIT may be terminated at any time by pressing the Start or Cue Input.

Building Programs

This simple procedure describes how to insert and edit instructions to build a program. Begin by entering the Program Editor.



Figure 2-29

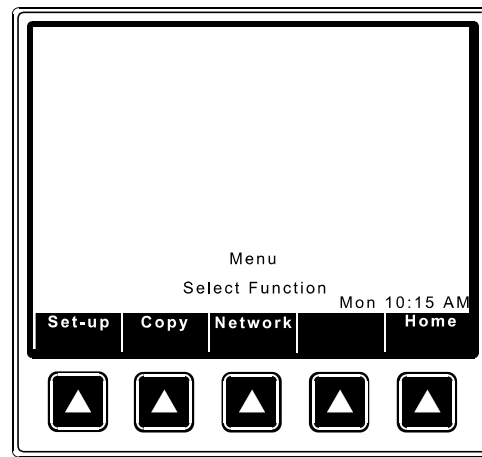


Figure 2-30

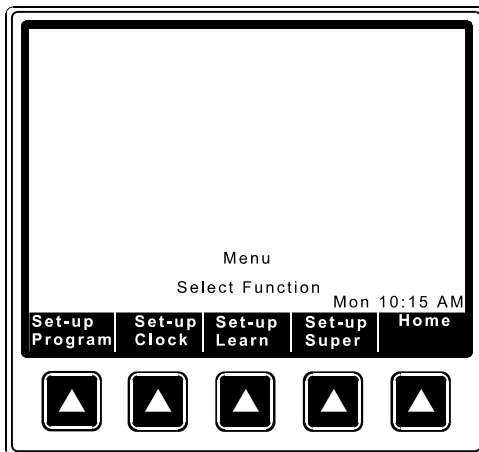


Figure 2.31: Press the [Set-up Program] key.

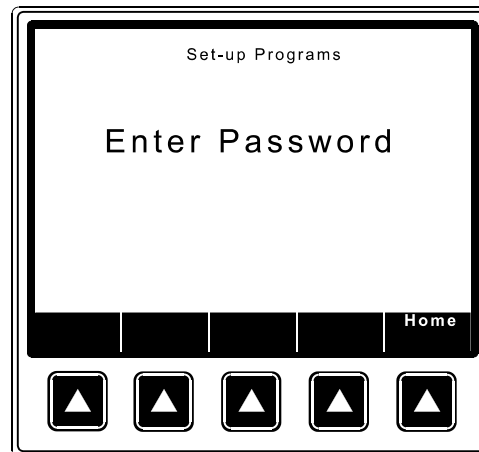


Figure 2.32: Enter the *high level* password.

The screen displays an empty program with the cursor on step 1. (The first number is the program number, the second is the step number.) Begin by pressing the [Insert] key. The cursor will highlight the entire step. Once in **Insert mode** there are two methods of entering instructions. The first method is to use the cursor up and down keys to scroll through the list of 34 instructions. The second method is to enter the number of the instruction. The correct instruction will be inserted and displayed

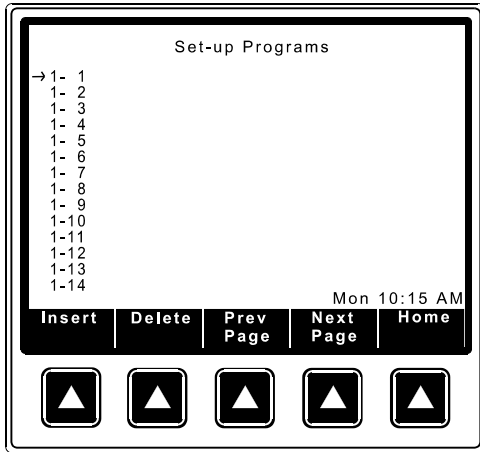


Figure 2.33: Press [Insert].

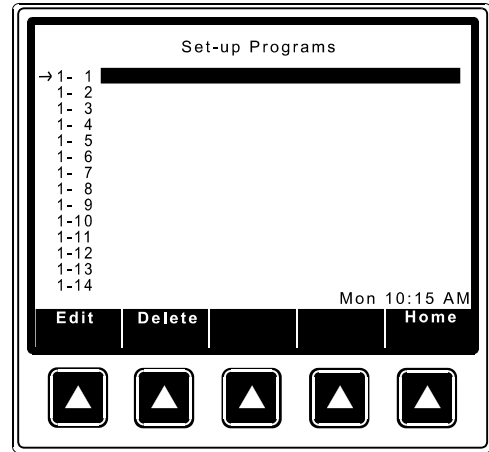


Figure 2.34: The cursor will highlight step 1-1:.

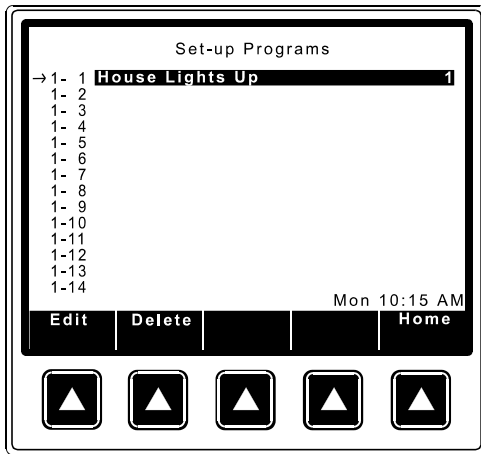


Figure 2.35

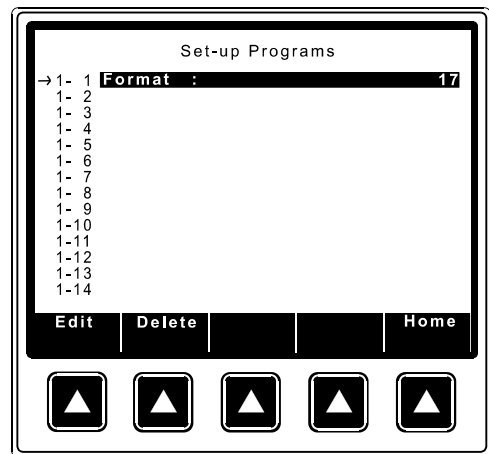


Figure 2.36: Press [1][7][ENTER] to insert the Format instruction.

Insert Mode allows you to edit the fields in each instruction. The Format instruction has three fields to edit. Use the cursor right and left keys to scroll through the fields. Use the number keys to edit the numeric data and the Select Message key to edit text fields.

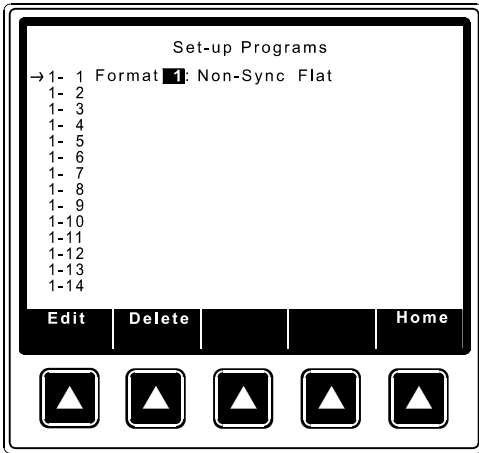


Figure 2.37

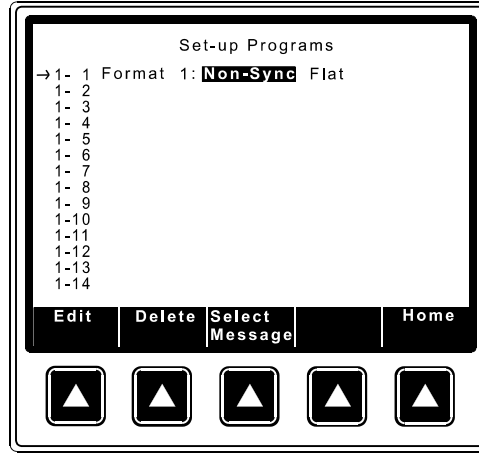


Figure 2.38: Cursor right to the next field.

Note: When inserting instructions by entering the instruction number, enter a leading 0 for the single digit instruction numbers. Or press [ENTER] after entering the single digit number.

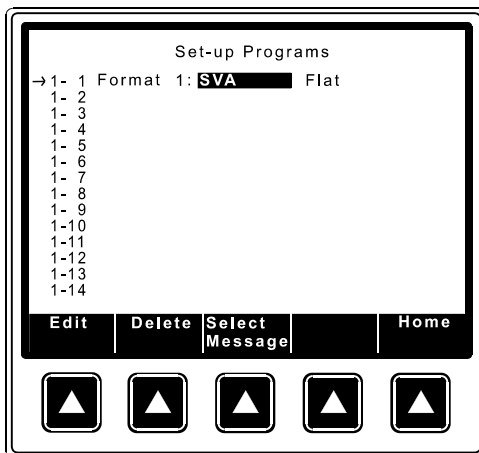


Figure 2.39: Press [Select Message] to change the sound format.

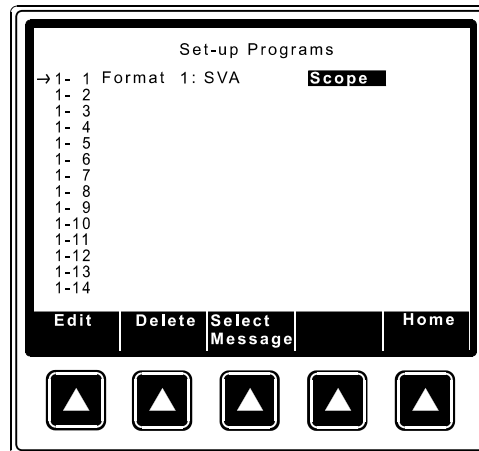


Figure 2.40: Cursor right to the lens format field. Press [Select Message] to edit.

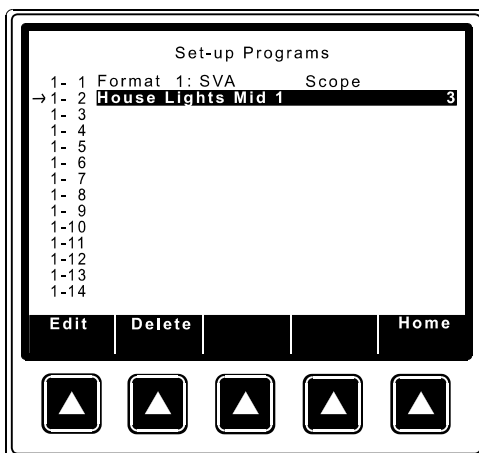


Figure 2.41: Cursor down to the next field and select instruction 3.

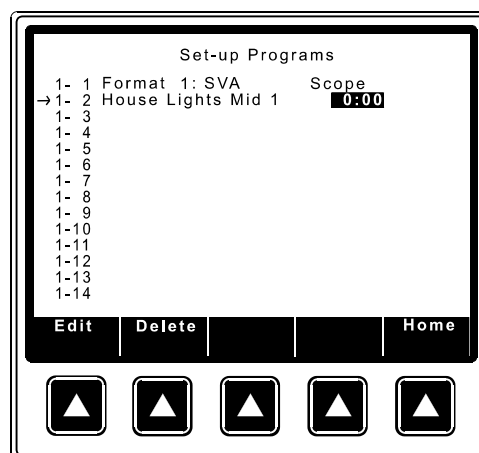


Figure 2.42

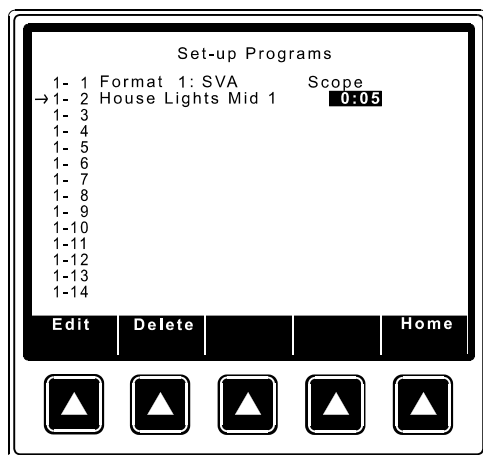


Figure 2.43: Enter a delay time.

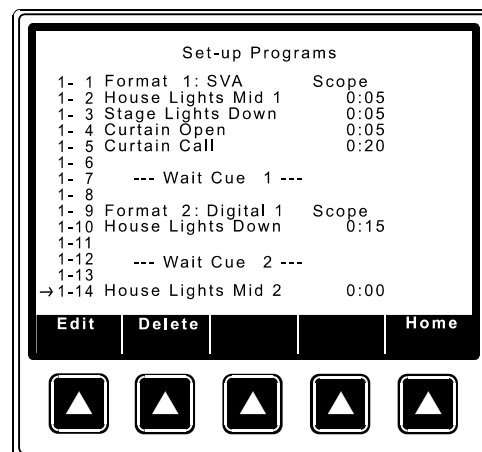


Figure 2.44

Programming notes

Remember "anticipatory" instructions (Curtain Call and Curtain Close Early) must be encountered before the Wait Cue instruction and are only active in the "Learned" mode.

Use the Cue Learn Mode on the first showing of a feature. If film cues are absent, insert cues manually as required using Cue Input key.

To delete an entire program: copy an "empty" program into the program you want to delete; or enter step #1 of the program and repeatedly press Delete to clear all program steps. Be sure all steps are cleared.

The eCNA-200 contains a "Canned" program called "Default 1" in the Local Copy screen. Copy this program to one of the program locations. This program can be useful as a starting point and can be modified to meet your particular requirements.

The last Wait Cue instruction will initiate the show close functions.

When data entry is complete verify the information by scrolling through the program and checking it against the written copy. Verify the actual operation of the program by running a "dummy" show. Remember to experiment with fault and power loss conditions.

Switching between programs while on a particular step will move you laterally to the same step in the new program.

Set-up Cue Learn

Each time a program is executed the computer stores each cue time in memory. If the eCNA-200 was in *cue learn mode* when the show ended the values for the cue times are saved to a table in *battery-backed* memory. The values in this table can be viewed and edited. A program can store up to twenty cue times. Access is granted with *password 1* or *2*. To access the cue times from the Set-up menu, press [Set-up Learn] and enter the password.

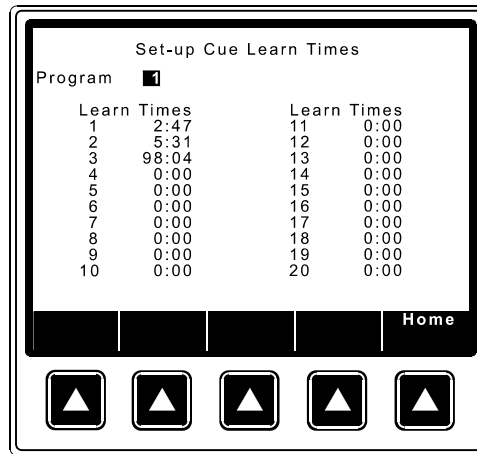


Figure 2.45: From the Set-up menu, press [Set-up Learn] and enter the password.

Enter the program number you want to view and press [ENTER]. Now you are viewing the *cue learn times* for Program 1. At this time you may enter or edit the cue learn times by using the number keys. Press the cursor keys or [ENTER] to move to different learn time fields. The learn times are displayed in minutes and seconds. The maximum value that can be entered is 999 minutes 59 seconds (equivalent to 16 hours 39 minutes and 59 seconds). Press the [CLEAR] key to reset the cue time to 0:00. Clear all cue times which are not being used. **Verify upon completion that all cue times are arranged in chronological ascending order.**

Set-up Clock Start Times

The Clock autostart function allows automatic programmed start times on a daily basis. Each day's schedule can be different if required and can consist of any combination of available Programs. Up to ten Programs can be scheduled per day. The Clock function must be enabled in the Supervisory (only with the *high level*, password #2). Schedules can be set with passwords #1 and #2; and the Clock Start Mode can be activated by pressing the [Start Mode] key while in the *Run Mode* screen.

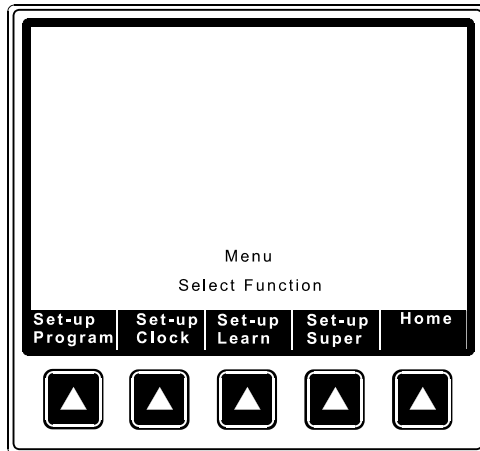


Figure 2.46: From the Set-up screen press [Set-up Clock].

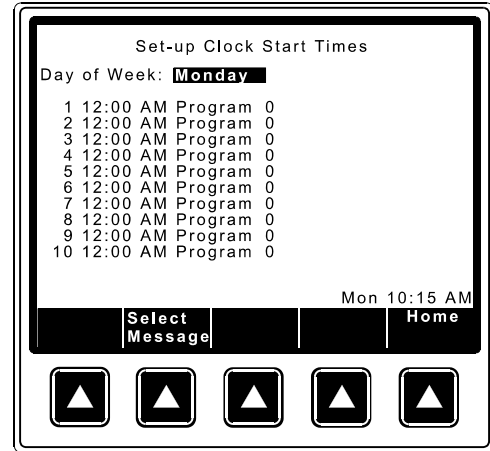


Figure 2.47: Enter the password and press [Select Message] to select a day of the week.

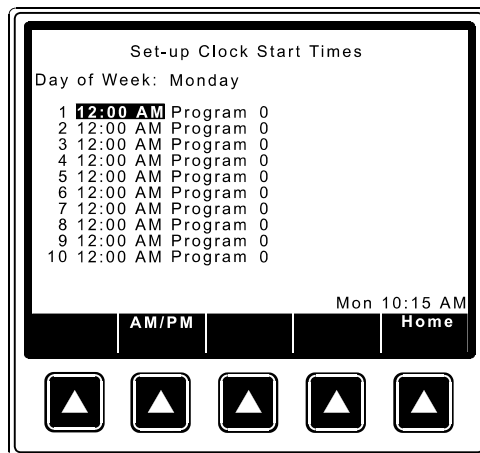


Figure 2.48: Cursor down or press [ENTER] to edit the first start time.

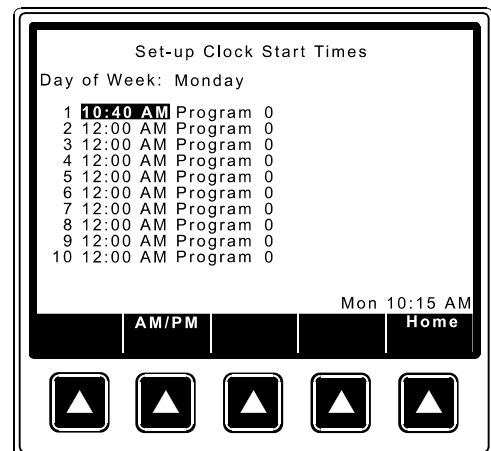


Figure 2.49: Edit the time with the number keys.

In *12 hour mode*, toggle AM and PM with the AM/PM key.

Cursor to the program number field and edit the program number with the number keys. Continue to enter start times for the day in chronological order.

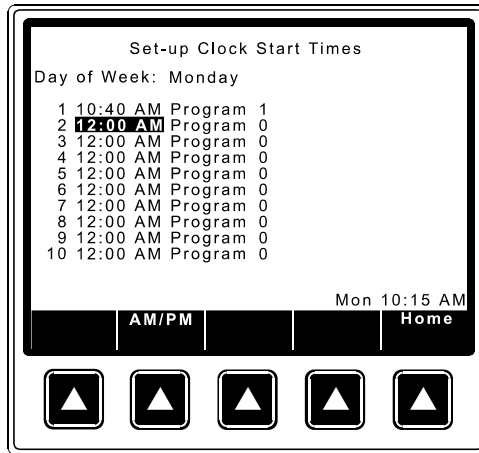


Figure 2.50: Enter start times in chronological order.

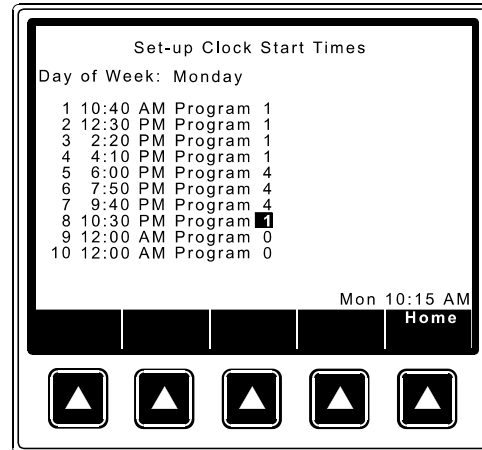


Figure 2.51

If fewer than 10 clock start times are required for the day, enter the number 0 in the program number field. These entries will be ignored. Scroll back to the Day of Week field and select a new day to edit.

HINT: Use the copy function to copy program clock start times from one day to another and edit as required. (See *Local Copy* section.)

The Copy Function

The Copy function can be used to copy Clock Start Times, Programs or Supervisory data from one location to another. The copy function provides the option for a *Local* copy or a *Network* copy. The Local Copy is used to copy Clock Start Times or Program from one location to another. For instance, if clock start times are the same for Monday as for the rest of the week, the times can be entered for Monday and then copied to other days with the same schedule. Similar schedules can be copied and then edited. The same holds true for building Programs. For instance, make Program #4 a copy of Program #2 and edit as required. Using the Local Copy function dramatically reduces the amount of data entry normally required in building programs.

The Network Copy is used to copy Clock Start Times, Programs or Supervisory data from a *remote* eCNA-200 or CNA-200. This further reduces the amount of data entry, particularly in large multiplexes. Using Network Copy you can only copy program data *from* a remote eCNA-200 to the eCNA-200 that is performing the copy. You are prohibited from copying *to* a remote eCNA-200. If the remote device selected is not responding an error will be generated on the screen.

To access the copy screens press [Copy] from the Main Menu screen.

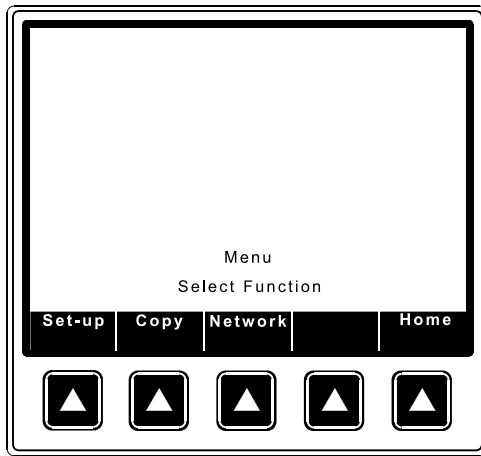


Figure 2.52: Press [Copy] from the Main Menu screen.

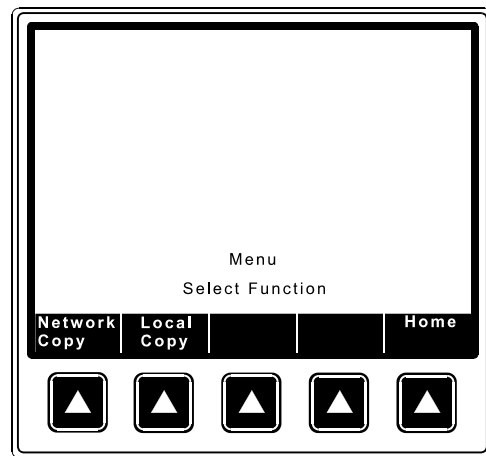


Figure 2.53: From the Copy Menu you can select Local or Network Copy.

Local Copy

This function allows the operator to copy a full days start times to another day. Any day can be copied to any other day. If a full days start times have been set up for Monday, for example, and the same schedule is valid for the other days, the start times can be copied from Monday to Tuesday, from Monday to Wednesday, from Monday to Thursday, and so on.

This screen also allows the operator to copy an entire program from one location to another and then edit the program as necessary.

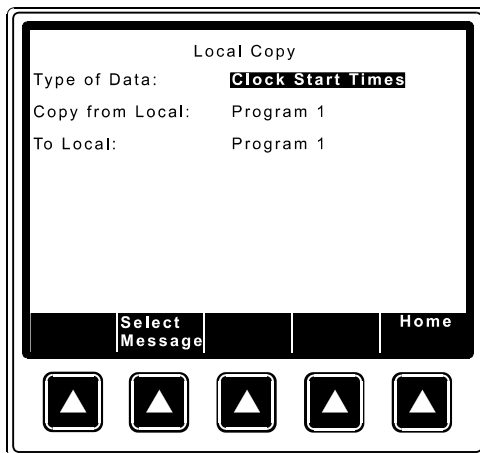


Figure 2.54: Press [Local Copy] and enter the high level password.

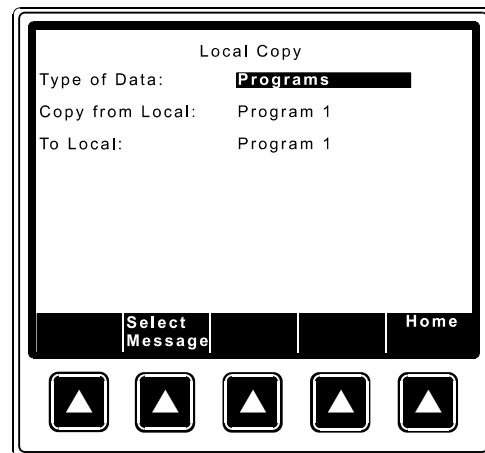


Figure 2.55: Select "Type of Data" to copy by pressing the [Select Message] key.

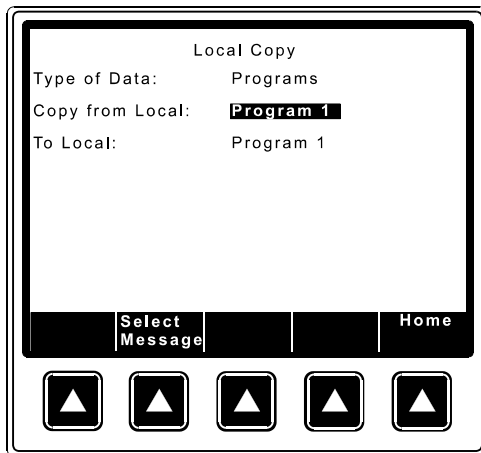


Figure 2.56: Cursor down to the “Copy from Local” field and select the program you want to copy data from.

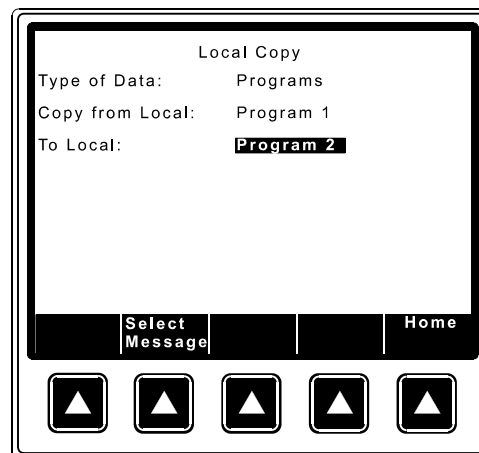


Figure 2.57: Cursor to the “To Local” field and select the program number you want to copy data to.

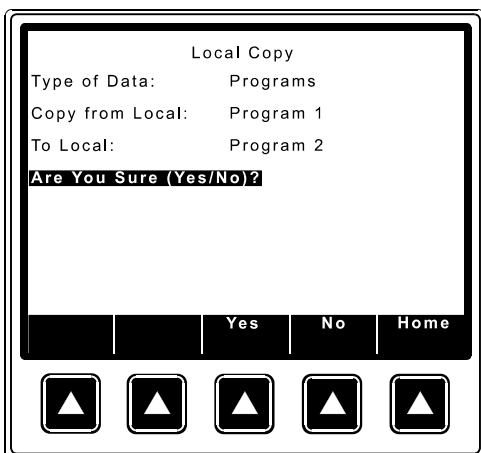


Figure 2.58: Press [ENTER]. You are prompted with an “Are You Sure (Yes/No)?” message.



Figure 2.59: Press [Yes] to perform the copy.

The “Copy Complete” message indicates the copy was successful.

The same procedure is followed when copying Clock Start .

Note: You cannot copy to a program that is running. The message “Can’t Copy to Show in Progress” will be displayed to indicate this.

The Local Copy screen also contains a “canned” program called **Default 1**. You can copy this program to one or more of the program locations. This program is useful as a starting point and can be modified to suite your particular requirements.

The “**Default 1**” program is assembled as follows:

1 Slide Projector Off	0:00	11
2 Curtain Open	0:00	12 House Lights Mid 2
3 House Lights Mid 1	0:00	13 ---Wait Cue 3---
4 Stage Lights Down	0:00	14
5 Format 1: Mono Flat		15 House Lights Up
6 ---Wait Cue 1 ---		16 Stage Lights Up0:00
7		17 Curtain Close 0:00
8 House Lights Down	0:00	18 Slide Projector On 0:00
9 Format 2: SVA Scope		19 Format 3: Non-Sync Flat
10 ---Wait Cue 2 ---		

Network Copy

The Network Copy function allows the operator to copy Programs, Cue Learn Times, Clock Start Times and Supervisory data from a remote eCNA-200.

This function allows the operator to copy Clock Start Times for the whole week from a remote eCNA-200. For example, when a movie is moved from one house to another and the start times are to remain the same for the movie, the operator can quickly copy the start times.

When copying from a remote eCNA-200 you need to know the ID number of the remote eCNA-200 you want to copy from. The ID number of an eCNA-200 is normally the same number of the movie house it is in. The start times can be copied using either password #1 or #2.

The Program copy option allows the programmer to copy a program from any remote eCNA-200 on the network to any one of the nine (9) program locations at the local eCNA-200. It also provides the option to copy *all* the programs at one time. The *cue learn times* are copied with each program. Password #2 is required to copy programs over the network.

This feature is useful when movies are moved from one house to another. For example, the movie in house #4 needs to be quickly moved to house #8 and Program#1 in house #4 is needed to run the movie. It is determined by the operator that the program will be copied to the Program #4 location at the eCNA-200 in house #8. The operator would perform the copy from house #8. It is possible to copy only the cue learn times for a program.

Select Supervisory Data to copy the Supervisory data from a remote eCNA-200. All Supervisory data except for Sync Loop number, Run Hours and Maintenance Schedules are copied by this function. Progress status messages will be displayed as necessary.

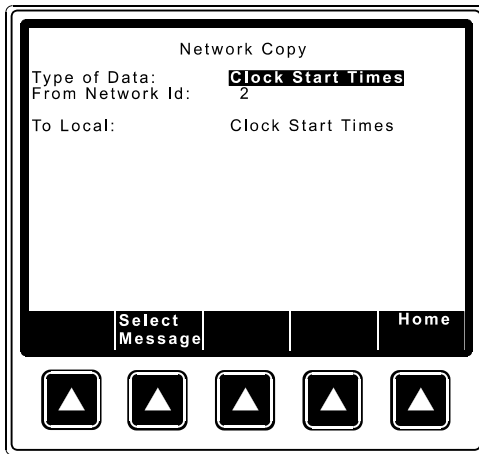


Figure 2.60: Enter the Network Copy screen and select the "Type of Data" to be copied.

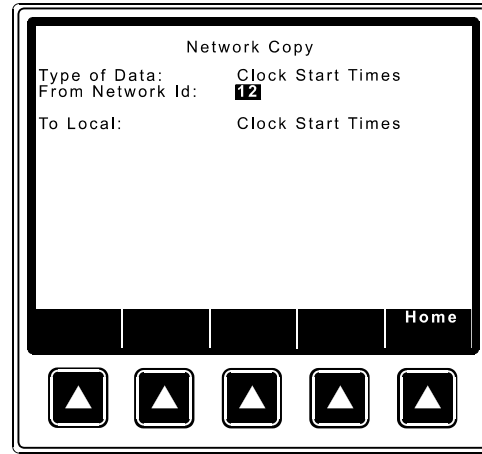


Figure 2.61: "From Network ID"

Note: The ID is usually the house number.

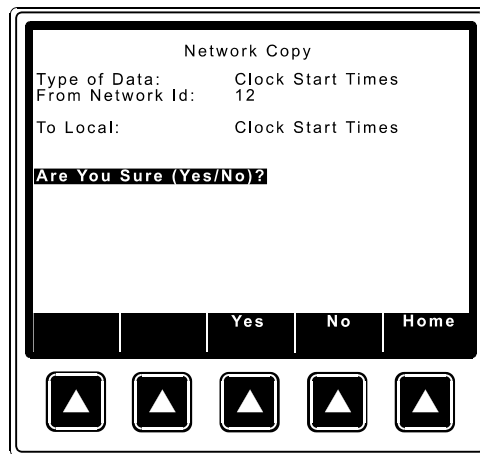


Figure 2.62: Press enter and you are prompted with the "Are You Sure (Yes/No)?" message. Press [Yes] to complete the copy.

The screen will display the message "Network Transfer Complete" to indicate a successful copy.

The "type of data" the Network Copy currently supports is:

Program 1 - 9, All Programs, Clock Start Times, Supervisory Data,
Learn Times 1 - 9

Manual Control Screen

This screen provides a means to manually control or override the eCNA-200 outputs. Enter this screen (from the main run screen) by pressing [Menu][Manual Control]. Move the cursor [→] around the screen with the keypad cursor keys.

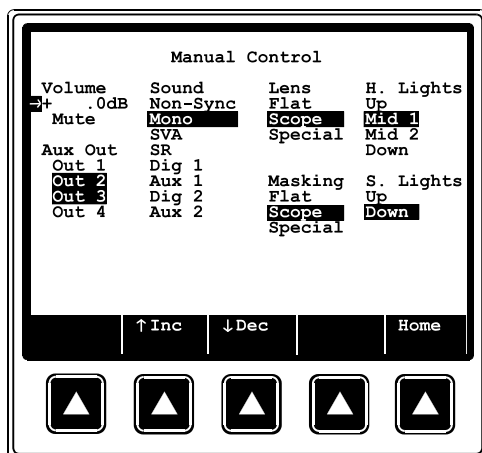


Figure 2.63: Change the volume by pressing [↑ Inc] or [↓ Dec].

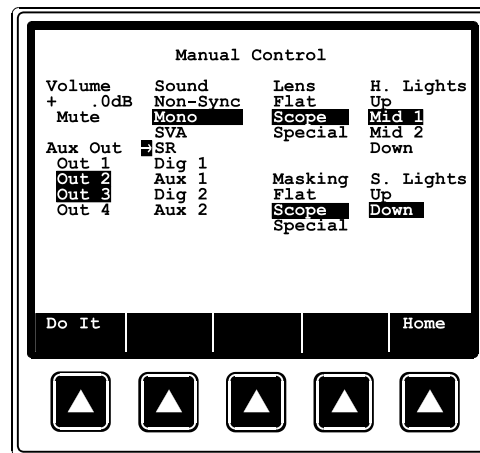


Figure 2.64: Move the cursor to the desired field and press [Do It].

Change the volume by pressing the [↑ Inc] or [↓ Dec] keys. These keys have a repeat function. Press and hold keys to ramp volume to a new level. Note: Controlling the volume requires the RVC-5 or RVC-10 volume control boards.

Active outputs are indicated with reversed video. To activate an output, move the cursor to the desired field and press the [Do It] key. Sound, Lens, Masking and Lights function like “radio push buttons”. One output is always active.

The manual override soft keys will work somewhat differently depending which termination board you are using. The FORMAT program instruction will change the lens and masking together and the manual soft keys will change them independently when using a dual termination system. When a single termination board is used, the lens/ masking relays are operated together and are controlled only by the lens. In this case when the FORMAT instruction is used, operation is normal, however the MASKING instruction does nothing. You must use the LENS soft override and the LENS or LENS/MASKING instruction to change the lens/masking outputs on the single termination board.

Network Status Screens

There are three Network “Status” screens used to display the status of devices connected to the Local I/O Network (LIN) and the Local Synchronous Network (LSN). The three screens are the LSN Status, LIN Status and Remote Monitor. These screens are a valuable tool for the installation engineer and projectionist.

LSN Status

The “Local Sync Network Status” screen is an *overview* of ID and LOOP numbers of all devices on the network. This includes eCNA-200s, CNA-200's, CNA-150s, CNA-100s, RSM-10 Remote Monitors and the PC Host. Up to 64 devices can be displayed on this screen.

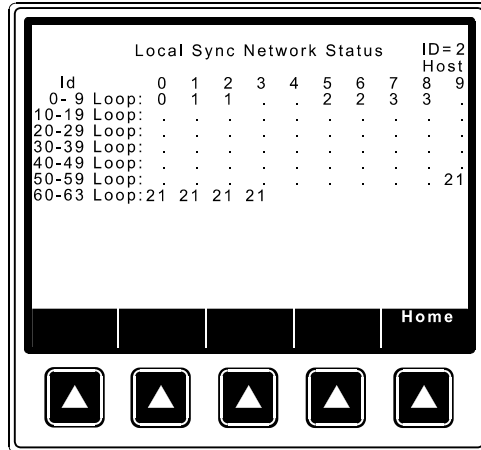


Figure 2.65: Press the [Network] key from the Main Menu. Press [LSN Status].

LIN Status

The “Local I/O Network Status” screen is an overview of the devices connected to the “I/O” network (i.e. Booth and Console termination panels). Press [LIN Status] to view this screen.

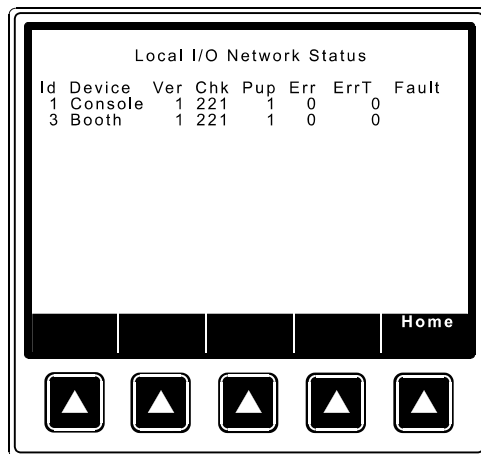


Figure 2.66: Press the [Network] key from the Main Menu. Press [LIN Status].

Each of the 64 positions on the screen represent a network ID number 0 through 63. Each ID will display either a sync LOOP number of or a “.”. The “.” indicates that there is no device at that ID.

Id Indicates the ID number of the device.
Device Is the name of the device.
Ver Is the software version number.
Chk Is the checksum number.
Pup Counts the number of times the device was powered up or reset.
Err Counts the number of times the eCNA-200 has polled the remote device with no response.
ErrT Tracks the number of times the eCNA-200 has polled the remote device.
Fault Fault messages to indicate the type of problem that exists. The messages are:

DevErr
CommErr
TimeOut

DevErr Indicates that the eCNA-200 does not recognize the remote device. This could be due to software version incompatibility.

CommErr Indicates that the remote device is not responding regularly enough. This could be due to a defective remote device or the wiring to it.

TimeOut Indicates a communication timeout condition, meaning that the remote device stopped responding after 5 seconds.

Any of these faults will cause a “LOCAL I/O NETWORK FAULT” message to be displayed on the top line of the display. Correct the problem and press the ALARM CANCEL key to clear message.

Following is a list of I/O devices currently supported by the eCNA-200.

ID=1 Console: Console Termination Panel #1	ID=9 MCD-35: Film Monitor and Cue Detector #2
ID=2 Console: Console Termination Panel #2	ID=10 ACP-50: Auxiliary Control Panel #1
ID=3 Booth: Booth Termination Panel	ID=11 ACP-50: Auxiliary Control Panel #2
ID=4 Aux I/O: Auxiliary I/O Board #1	ID=12 RVC-10: Remote Volume Control (analog & digital)
ID=5 Aux I/O: Auxiliary I/O Board #2	ID=13 QDC-400: Quad Dimmer Control Board #1
ID=6 Aux I/O: Auxiliary I/O Board #3	ID=14 QDC-400: Quad Dimmer Control Board #2
ID=7 Aux I/O: Auxiliary I/O Board #4	ID=15 QDC-400: Quad Dimmer Control Board #3
ID=8 MCD-3 : Film Monitor and Cue Detector #1	ID=16 QDC-400: Quad Dimmer Control Board #4

Note: The Single Termination Panel P/N 39332 is reported as both a Console and Booth.

Remote Monitor

This screen displays the status of all CNA automations on the network.

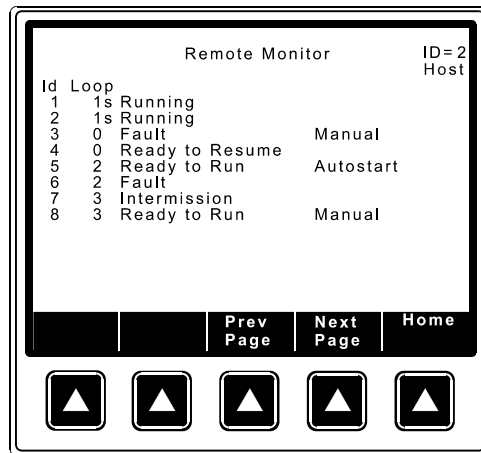


Figure 2.67: Press the [Network] from the Main Menu. Press [Remote Monitor].

The CNA automations will be displayed in order of ID number. The next column displays the Loop number. An “s” is displayed to indicate running synchronous or interlock. The following messages will be displayed to indicate the various conditions:

Ready to Run	Ready to Resume	Running	Intermission	Fault	Fault - Alarm	Manual	Autostart
--------------	-----------------	---------	--------------	-------	---------------	--------	-----------

The “Fault - Alarm” message is displayed to indicate an alarm condition. If the alarm is from a remote CNA automation, the local screen will display:

REMOTE ALARM AT ID: dd

where dd is the ID number of the CNA where the fault occurred. The alarm at all remote eCNA-200 automations will sound in short beeps (if “Remote Stop Alarm” is enabled).

The main run screen will also indicate a remote alarm and Id number.

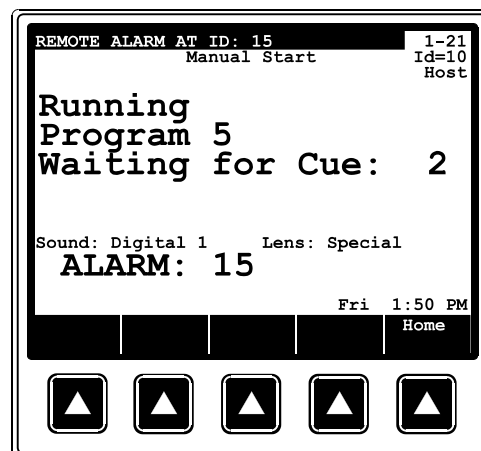


Figure 2.68

3 Operation

Cue Learn Function

The “Wait Cue” instruction waits for a cue input before executing subsequent instructions in the program. Cues can be input manually using the Cue Input key, or foil cues on the film can be sensed by the cue detector of the failsafe assembly.

The Cue Learn function should be used on the first run of the program and after any change is made to the film itself (adding, deleting or moving cues). Using the internal clock, the eCNA-200 will “learn” when the cues of a particular film should occur. After learning cue times all subsequent presentations will be run in the “Learned” mode. The eCNA-200 will expect to encounter these cues at particular times. If film cues are not encountered within a specified “window”, the system will automatically “insert” a cue allowing the program to carry out the next set of instructions. If any of the film cues are missed during a presentation an error message will be displayed at the end the show indicating which cues were missed. The size of the “window” is defined by the Cue Factor Default function in the Supervisory. The Cue Factor Default can be overridden by using the Cue Factor instruction in the Program allowing you to vary the width of the “window” throughout the Program. Note that the Cue Input key on the control panel is always active.

The Cue Learn function in the Supervisory can be set to Auto or Manual. In the Auto mode Cue learn is automatically disabled after the first run of the program, after which all subsequent runs will be in the “Learned” mode. In the Manual mode Cue Learn must be disabled manually by pressing the Cue Learn key.

Cue Window Factor

The Cue Window Factor is a function of the cue times measured. Briefly, in Cue Learn Mode, the system measures the cue times produced using the film cue foils. Thereafter, if cues are missing, the system automatically supplies them. The width of the window is calculated using the Cue Window Factor and is *centered* around the normal cue time. Using this system, the projectionist does not have to be concerned about any missing or errant cues, once cues have been learned.

The cue window is calculated to be sufficiently wide to accommodate any timing variations due to changes in motor speed caused by power line voltage or frequency fluctuations.

The Cue Window is calculated by the following equation:

$$\text{Cue Window} = (\text{CWF value}) \times (\text{cue location})$$


EXAMPLE: CWF value = 0.002, cue location = 2 hours

$$\text{Cue Window} = 0.002 \times 2 \text{ hours or } 120 \text{ minutes or } 7200 \text{ seconds}$$

$$\text{Cue Window} = 0.004 \text{ hours} = .24 \text{ minutes} = 14.4 \text{ seconds}$$

The Cue Window would be interpreted as follows. With a CWF value of 0.002, the eCNA-200 would memorize the cue locations and wrap them in a 0.002 window. If an end cue was sensed at the 2 hour mark, the window would be 2:00:00 +/- 7.2 seconds for a total window of 14.4 seconds.

Illustrated it would look like this:

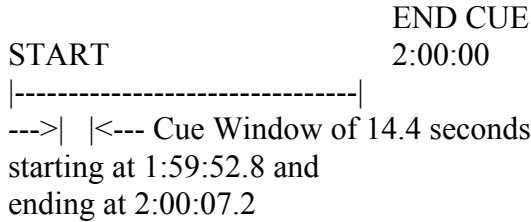

Given a normal 2 hour presentation with four cues, we could establish a table indicating their respective time locations.

Name	Cue	Time From Start
Trailer	1	0.0015625
Show	2	0.004537037
Credits	3	0.0753009259
End	4	0.0833333333

Utilizing the same CWF value for each cue, the eCNA-200 would construct a cue window table.

Name	Cue	Time from Start	Cue Window		
			Start	End	Size
Trailer	1	0.0015625	0.00156	0.0016	0.3 sec.
Show	2	0.004537037	0.00453	0.0045	0.8 sec.
Credits	3	0.0753009259	0.07515	0.07545	13.0 sec.
End	4	0.0833333333	0.083252	0.08341	14.4 sec.

Under normal conditions the eCNA-200 will only recognize cues within the four established windows. If none are sensed it automatically inserts one at the end of a window which maintains your professional presentation. If cues are sensed outside the windows, they are assumed false and ignored.

The value of the cue window factor is determined by analyzing your local utility company's power fluctuations. This is done with the eCNA-200. Simply keep the unit in the Cue Learn Mode for several days. After each presentation of the same show, record the cue values displayed in the Cue Learn setup screen.

To analyze the values, determine the maximum fluctuation in overall run time.

LEARNED CUE VALUES

Cue	Show 1	Show 2	Show 3	Show 4	etc.
Cue 1	0.001	0.001	0.001	0.001	-----
Cue 2	0.0028	0.0028	0.0028	0.0028	-----
Cue 3	0.07292	0.07308	0.07301	0.07331	-----
Cue 4	0.07986	0.08005	0.07997	0.08028	-----

The widest fluctuation would be between shows 1 and 4. To estimate the CWF value, calculate the average fluctuation in run time by simply subtracting the low overall run time from the high overall run time (1:55:36 minus 1:55:00) and divide by 2. Then divide this number by the average run time [(1:55:36 + 1:55:00) divided by 2].

The result is as follows:

$$\begin{aligned}
 \text{Average fluctuation} &= (\text{HIGH VALUE} - \text{LOW VALUE}) \text{ divided } 2 \\
 &= (1:55:36 - 1:55:00) \text{ divided by } 2 \\
 &= (0:00:36) \text{ divided by } 2 \\
 &= 18 \text{ seconds}
 \end{aligned}$$

The average run time is simply calculated as follows:

$$\begin{aligned}
 \text{Average run time} &= (\text{HIGH VALUE} + \text{LOW VALUE}) \text{ divided by } 2 \\
 &= (1:55:36 + 1:55:00) \text{ divided by } 2 \\
 &= 3:50:36 \text{ divided by } 2 \\
 &= 1:55:18 \text{ or } 1 \text{ hour, } 55 \text{ minutes and } 18 \text{ seconds}
 \end{aligned}$$

The deviation is calculated as follows:

$$\begin{aligned}
 \text{Deviation} &= \text{AVERAGE FLUCTUATION} / \text{AVERAGE RUN TIME} \\
 &= 0:00:18 / 1:55:18 \text{ (convert to seconds)} \\
 &= 18 \text{ seconds} / 6918 \text{ seconds} \\
 &= .002602
 \end{aligned}$$

Your Cue Window Factor should not be less than the deviation. In our example the Cue Window Factor should not be less than 0.003.

We recommend adding 0.002 to the calculated three digit value. In our example the value in three digits is 0.005. A logical CWF should be 0.005.

The CWF value of 0.005 is logical in light of actual conditions. If you find lights coming up early at credits, you may wish to open the credit window up with a larger value. Remember, every 0.001 equals an increase in the window size of 3.6 seconds for every hour of movie length.

Our investigation indicates that power fluctuations normally represent a speed fluctuation of less than 0.1 percent (CWF value of less than 0.002).

Synchronous Operation

The eCNA-200 systems are capable of running film synchronously in a multi-projector booth. The eCNA-200 can be programmed for any one of twenty sync loops. This allows for up to twenty different sync loops on the network at one time. Pressing the Sync Mode key will activate the sync operation. To change the Sync Loop number, press [Menu][Set-up][Set-up Super][Set-up System], and enter either password. Set the loop number with the number keys.

Important: As a precaution, de-activate sync mode before changing the sync loop number. Changing loop numbers while sync is active may cause a fault to another machine that is running a show.

To run in sync the following conditions must be true:

1. A *sync cue* must be added to the beginning of the film. This is the first cue that is seen by the automation. It acts to initiate the start up sequence for each machine.
2. Sync Mode on each automation in the loop must be enabled.
3. The sync loop number on each automation in the loop must be the same.

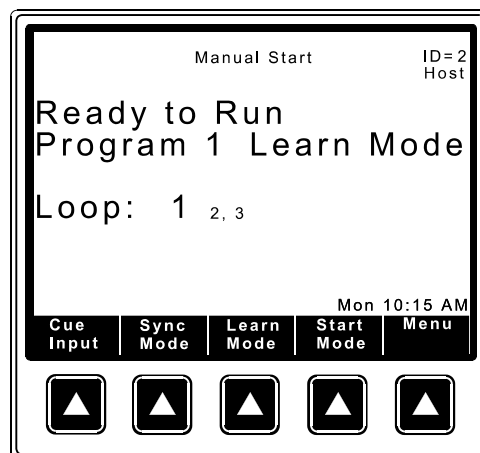


Figure 3.1

Figure 3.1 shows that Sync Mode is enabled. The Loop number is displayed in large text and the Id numbers on the sync loop are displayed in smaller text after the Loop number.

To begin a movie, insure that the sync cue is positioned somewhere before the cue detector on the first machine. Press the [START] switch on any machine in the loop. All projectors will start simultaneously. As the sync cue passes through each projector, the show start sequence will initiate.

At the end of the show each machine will shut down independently as the tail of the film runs out of the projector. On endless loop systems all projectors will continue to run until the last machine see the end cue. At that time all projectors will shut down simultaneously. “(t)” and “(c)” sync status line indicators are for timed or clock start mode.

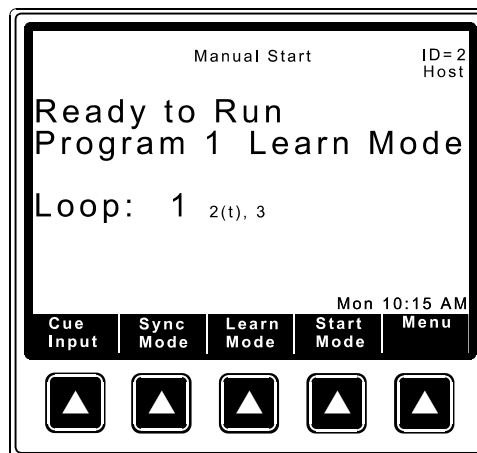


Figure 3.2: Id #2 is in timed start mode.

Endless Loop Operation (Single Machine)

The eCNA-200 makes *Endless Loop* operation simple and flawless. You will need a sync cue at the beginning of the film (optional -> and a Wait Cue 0 instruction in the program). Position the sync cue before cue detector. Just as in sync interlock, this cue acts to initiate the start-up sequence. It is not necessary that the show be started at the precise same point in the film each time. The sync cue guarantees a perfect start that is consistent from show to show.


Running the Presentation

It is necessary that the operator be fully familiar with the eCNA-200 and its features before running film. In particular, the Cue Learn feature and its use should be thoroughly understood. Initial running of each presentation, or of a film presentation that has been changed, should be conducted with the system in the Learn mode.


There may be times, either during a show or just testing the unit, where it may be necessary go from a "Ready to Resume" state to a "Ready to Run" state. As a convenience to the user, this can easily be done by pressing and holding the [STOP] key, and then pressing the [START] key until the display reads "Ready to Run". Release the [START] key first. This also forces the "Manual" start condition.

The following section describes the normal start up and shut down sequences of the eCNA-200 automation. These sequences can be modified by using special instructions.


Start Up Sequence (with format instruction). When the automation is started the projector and lamp are turned on. The lens is driven to it's programmed state. After the sound changeover delay, the changeover is opened and the film sound is selected. The sound changeover delay is programmable from 3 to 59 seconds.

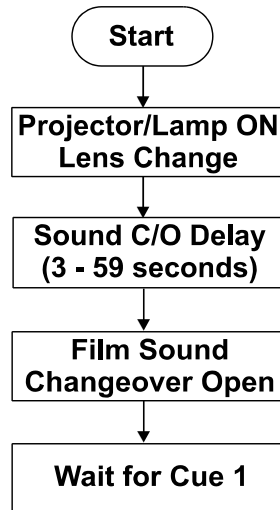


Cue (with a lens change). At the cue the changeover is closed, sound is muted and the lens is driven to it's new state. After the lens changeover time , the changeover opens and the film sound is selected. The lens changeover time can be programmed from 0 to 9 seconds.

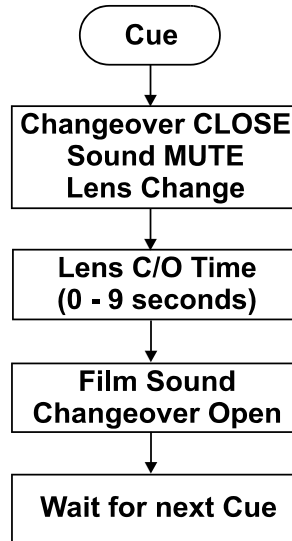

End of Show Sequence (with format instruction). When the last film cue is encountered, the changeover closes and sound and lens are driven to their new state. The shutdown delay has a programmable range of 7 seconds to 59 minutes:59 seconds.

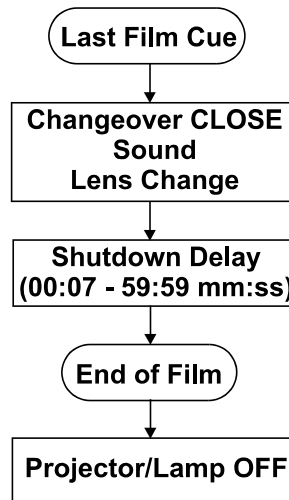


There are a two ways the eCNA-200 can end a show. The *film run-out* method is the most typical way to end the show. Insert a Wait Cue instruction at the end of the program. (Do not put a cue on the film.) The shut down sequence will begin when the end of the film is encountered.

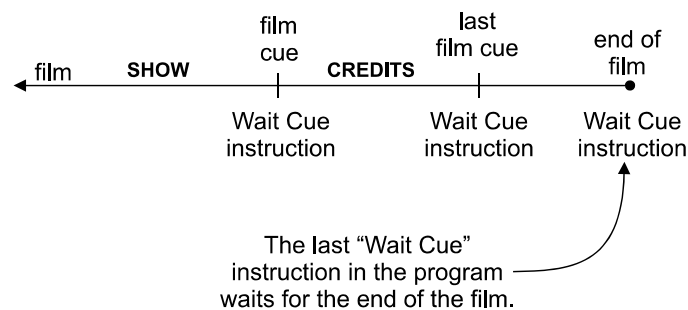

*The projector motor shuts off at the end of the film.

The second method to end a show is with the *end of show timer*. By default the end of show timer is 7 seconds. This can be stretched out to 59 minutes; 59 seconds with the Shutdown Delay instruction. The timer starts when the last film cue is encountered. The shut down logic will begin when the timer expires or the end of the film is encountered (whichever is first).

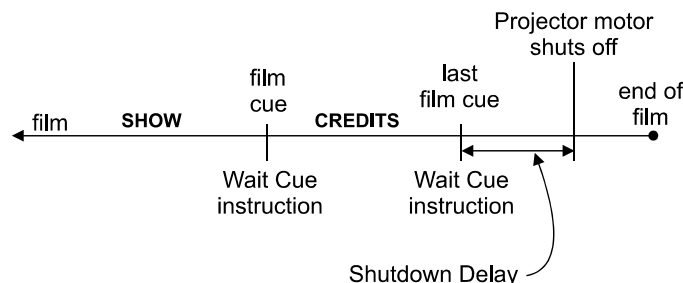

*The projector motor shuts off when the timer expires or the end of the film.

Note: Using the second method in ‘learn mode’, a film break during the credits will not sound the alarm since the last wait cue is waiting for the end of the film. In the ‘learned mode’, however, the eCNA has memorized the last cue and the end of the film. Therefore, the alarm will sound if the film breaks during the credits.

Event and Show Log

A history of automation activity can be found in the event log file. This file can be viewed with eCNA-200 screens and the Host program. The eCNA automation maintains this log file of up to 1365 events in battery-backed memory. Event log records can be viewed in chronological order with the eCNA-200 “Event Log” screen. Events can also be viewed for a particular show with the “Show Log” screen

Each event record contains automation and event parameters as well as real time status. The Event record contains the following data:

1. Network ID (1 through 63)
2. Record Version Number (event record version)
3. Network Device Type (CNA-100/150/200 or eCNA-200)
4. Event Code Number
5. Event Code Name
6. Event Flags 1 (type of event and real time status)
7. Show Sequence Number (0 through 9999)
8. Time & Date
9. Show Down Timer (in seconds at time of event)
10. Sync Loop ID Number (at time of event)
11. Program Number (at time of event)
12. Show Status (at time of event)
13. Cue Number (at time of event)
14. Parameter 1 through Parameter 8 (event specific data)

If the Host program is running, events are sent to the Host immediately after they have occurred. Once an event has been sent to the Host it will not be sent again. Events are only sent to the Host at Id=0. Therefore it is important for technicians using their laptop interface *not* to have their Host set at Id 0. It is recommended that Id 63 be reserved for the “Secondary” Host. If Id 63 is already being used by a device, another available Id must be used.

There are currently 52 different events. Each event is defined below.

Event No. Description and Cause

Battery	(26)	Low Battery Fault - Real Time Clock chip lost battery backup.
ClkHostF	(54)	Host forced a clock set by using the "synchronize clocks" option.
ClkHostR	(53)	Clock was set from Host after the CNA requested time. (This happens on a CNA power up and at 4:00 am if the host is up.)
ClkKeyBd	(52)	Clock was set from CNA Keyboard.
ClrBuffH	(49)	CNA Event Log Buffer was cleared from Host.
ClrBuffK	(48)	CNA Event Log Buffer was cleared from CNA keyboard (1-2-3-4-CLEAR)
ClrSnumH	(51)	Show Number was cleared (reset to 0) from Host program.
ClrSnumK	(50)	Show number was cleared (reset to 0) from CNA-200 keyboard (1-2-3-4-5-CLEAR)
CueAuto	(40)	Automatic Cue - automation issued a cue at the end of a cue window.
CueAuto0	(44)	Automatic Cue 0 - This always happens at show start (not in sync).
CueFilm	(42)	Film Cue (learn mode).
CueFS	(43)	Failsafe Cue (learn mode) - end of show failsafe shutdown
CueKeyBd	(45)	Keyboard Cue from CNA .
CueVFLM	(39)	Valid Film Cue - film cue occurred inside window (learned mode).
CueVFS	(41)	Valid Failsafe Cue (learned mode) - end of show failsafe shutdown.
Com_T/O	(19)	Sync Communications Timeout. Id = <i>Parameter 1</i>
Failsafe	(10)	Film Presence or Tension Fault (in progress or not in progress).
IntmStrt	(5)	Intermission Start - programmed intermission .
Intm_End	(6)	Intermission End - cue <i>or</i> start <i>or</i> timer.
IntrLock	(18)	Sync Interlock Fault. Id = <i>Parameter 1</i> .
KeyAbort	(46)	Stop/Start key abort - show program was aborted.
LIN_Flt	(17)	Local I/O Network Fault. Id = <i>Parameter 1</i> .
Motion	(11)	Film Motion Fault.
MemLTime	(15)	Learn Times Memory Fault.
MemProg	(14)	Program Memory Fault. Program Number = <i>Parameter 1</i> , Step Number = <i>Parameter 2</i> .
MemSTime	(13)	Clock Start Times Memory Fault
MemSuper	(12)	Supervisory Memory Fault
No_Mastr	(22)	Need Master to Resume
Not_RRes	(21)	Not Ready to Resume Fault. Sync Id = <i>Parameter 1</i>
Not_RRun	(20)	Not Ready to Run Fault. Sync Id = <i>Parameter 1</i>
ReadyRes	(25)	Ready to Resume Fault.
ReadyRun	(9)	Ready to Run (not in progress).
ResetClk	(37)	Loss of Clock Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)
ResetDog	(35)	Watchdog Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)
ResetExt	(33)	External Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)
ResetHlt	(36)	Halt Monitor Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)

ResetPup	(34)	Power up Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)
ResetTst	(38)	Test Reset. Year = <i>Parameter 1</i> , Month = <i>Parameter 2</i> , Day = <i>Parameter 3</i> , Hour = <i>Parameter 4</i> , Minute = <i>Parameter 5</i> , Second = <i>Parameter 6</i> (parameters 1 through 6 are the captured old time)
Resumed	(8)	Show Resumed
Show_End	(4)	Show End - Transition from "in progress" to "not in progress"
StartClk	(3)	Clock Start - Show started in "Clock" mode (local)
StartMan	(1)	Manual Start - LIN Start, Keyboard Start, Sync Start (slave)
StartTim	(2)	Timed Start - Show started in "Timed" mode (local)
StopFire	(23)	Fire Stop Fault
Stop_Man	(7)	Manual Stop - LIN Stop, Keyboard Stop
Stop_Rem	(24)	Remote Stop - LSN RSM-10, LSN sync stop
Sched_A	(27)	Maintenance Schedule A
Sched_B	(28)	Maintenance Schedule B
Sched_C	(29)	Maintenance Schedule C
Sched_D	(30)	Maintenance Schedule D
UserCode	(47)	User Code - <i>Parameters 1-7</i> are user entry and <i>parameter 8</i> is the show number
XenonFlt	(16)	Xenon Lamp Fault

Event Log

To view events at the eCNA-200 press [Menu][Event Menu]. At this point you can either view the Event Log or the Show Log screens. Press [Event Log].

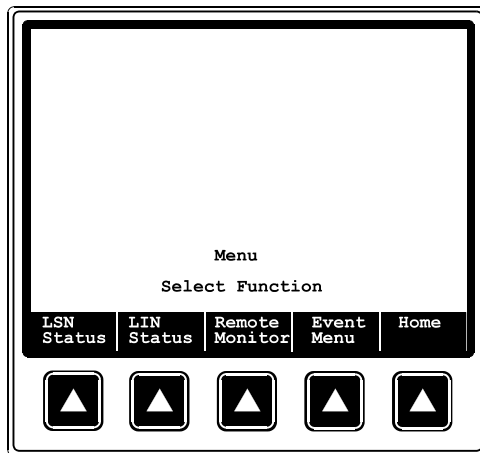


Figure 3.3: Press the [Event Menu] key.

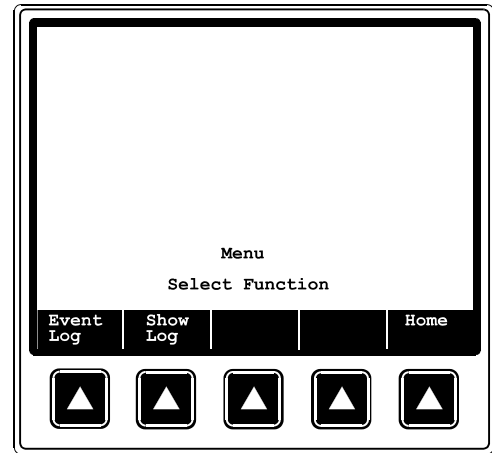


Figure 3.4: Press the [Event Log] key.

This is the Event Log screen. Upon entering this screen, you will be viewing the last 12 records of the file with the most current event (for that filter) on the bottom line.


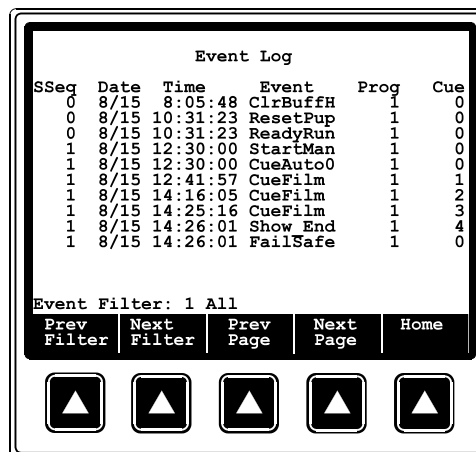


Figure 3.5: Event Log screen.

Figure 3.5 shows all the events that a typical 3 cue show would have. The first event indicates that the event buffer was cleared from the Host program. The second and third events indicate that the eCNA-200 was powered up and Ready to Run at 10:30:23. From the next series of events we can see that the show started at 12:30:00, received 3 film cues and ended at 14:26:01.

Press [Next Page] and [Prev Page] to page through the event file. The eCNA-200 will let you know when it has reached beginning or end of the file. You can also use the up and down cursor keys to scroll through the file one line at a time.

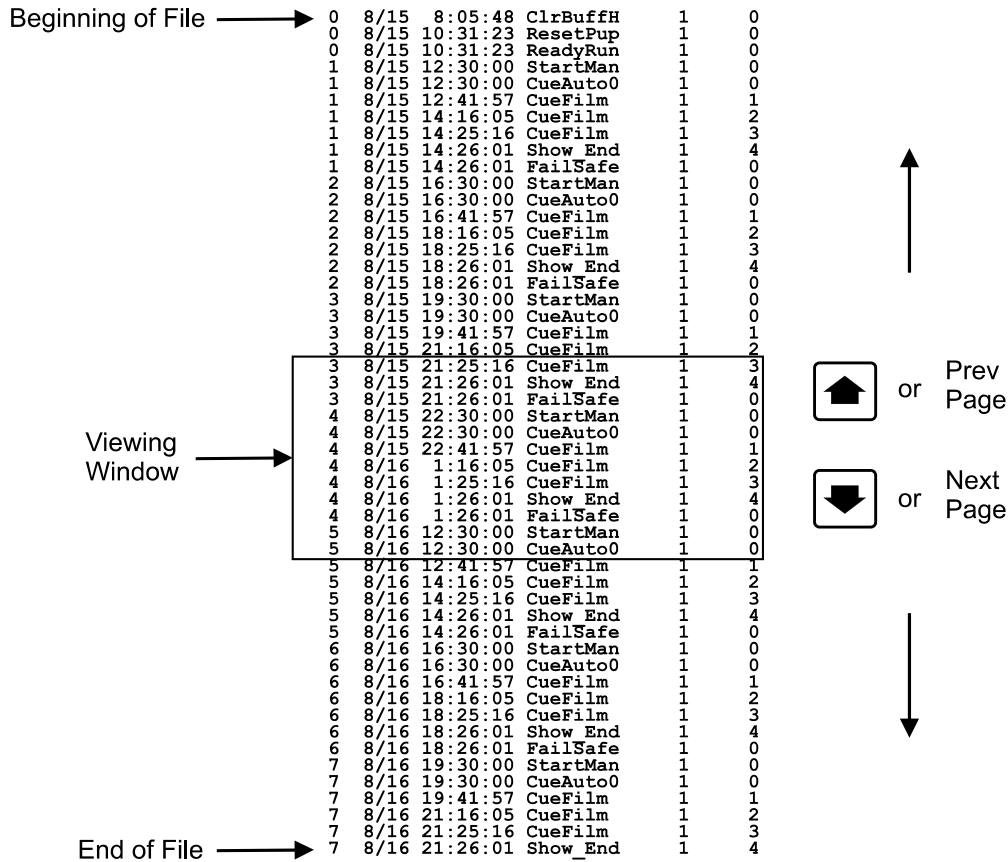

This shows how the eCNA-200 moves through and displays the Event file.

Event Filters

Event Filters were designed to allow the user to easily locate information that is of a particular interest. The event filters are listed and defined below.

- Event Filter: 1 All
- 2 Buffer Overflow
- 3 Computer
- 4 In Show
- 5 Major Fault
- 6 Minor Fault
- 7 Resume
- 8 Scheduled Events
- 9 Show Start/End
- 10 Unscheduled Shutdown
- 11 User Code

- 1 **All** - This filter displays all events in memory.
- 2 **Buffer Overflow** - This filter will display only the events that were logged when events not yet logged to the Host were over written in memory. This would indicate that events were permanently lost.
- 3 **Computer** - These events are computer memory faults and reset conditions.
- 4 **In Show** - These are the events that were logged while the show was in progress. This includes the “start” event.
- 5 **Major Fault** - These high priority faults that either caused the show to shutdown or prevented a show from starting.
- 6 **Minor Fault** - These are low priority faults that do not cause a show to shutdown or prevent a show from starting. These faults are usually status only such as the Maintenance Schedules and Low Battery Faults.
- 7 **Resume** - This filter only includes the Resumed event.
- 8 **Scheduled Events** - These are normal operating events such as show start, show end, cues and scheduled messages.
- 9 **Show Start/End** - This displays all show start and show end events.
- 10 **Unscheduled Shutdown** - These are events that caused an undesired interruption in the show. These faults effect the quality of a presentation.
- 11 **User Code** - This filter displays all the user code events. The user codes can include the operator Id and other information related to a particular show.

Press [Next Filter] or [Prev Filter] to scroll the 11 filters. Selecting the Show Start/End filter displays all start and end events in the file.

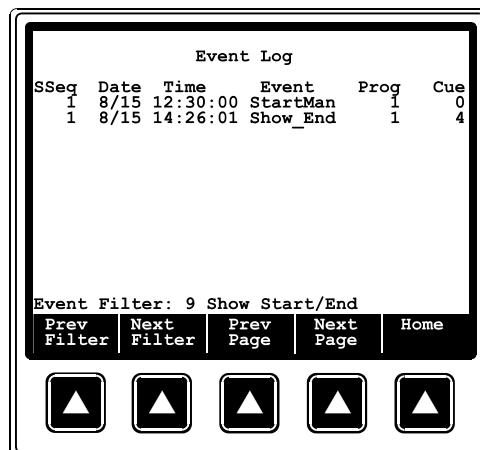


Figure 3.6: Select the desired filter with the [Next Filter] or [Prev Filter] keys.

Show Log

The Show Log screen provides the user with a summary of automation activities for a particular show. The Show Sequence number (Sseq) is shown in the upper right corner of the screen. This screen displays the following information.

- Show Number
- Program Number
- Start Mode
- Learn Mode
- Sync Loop Number (if sync was activated)
- Start Time
- End Time
- Total Down Time
- Event and time of event
- Cue Number
- Parameters 1 through 8 (event specific)

Upon entering the Show Log screen, the last show will be displayed. To view a previous show, press [Prev Show]. The event filters that are available on the Event Log screen are also available on the Show Log screen. Press the [Filter] key to make the [Prev Filter] and [Next Filter] keys available. Use these keys to select a new filter.

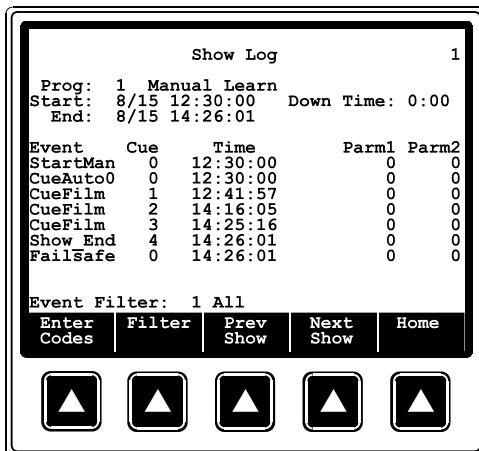


Figure 3.7

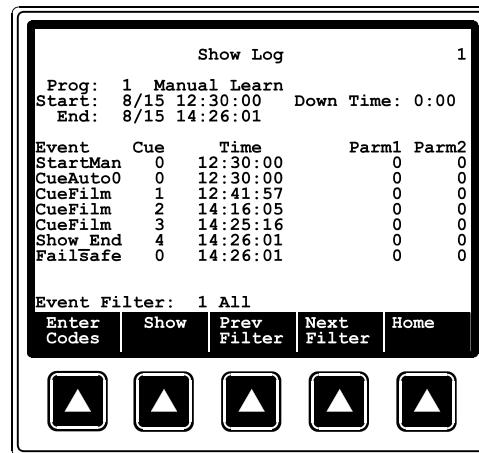


Figure 3.8

The Show Log screen also allows user input. Press the [Enter Codes] key to enter user codes for the show. The operator can enter numeric codes in up to seven different fields. These codes can be defined by management to have specific significance. For example, a numeric code could be entered in the “Problem Code:” field that would indicate more specifically what caused a failsafe shutdown. Or a number could be entered in the “Test Code:” field to mark a show as a “dummy” or “test” show.

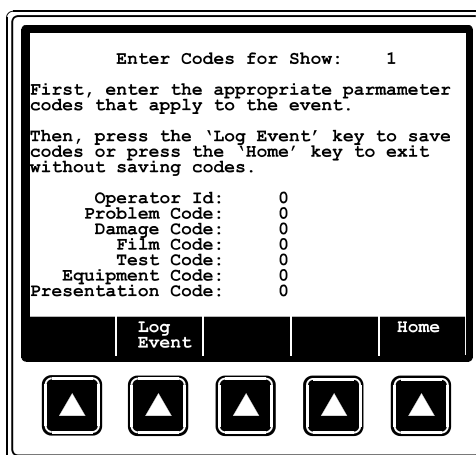


Figure 3.9

Pressing the [Log Event] key will save the user code(s) as an event. When the Event is viewed at the Event or Show Log screens, parameters 1 through 7 will contain the user entered codes.

- Parameter 1 = Operator Id
- Parameter 2 = Problem Code
- Parameter 3 = Damage Code
- Parameter 4 = Film Code
- Parameter 5 = Test Code
- Parameter 6 = Equipment Code
- Parameter 7 = Presentation Code
- Parameter 8 = Show Number

The show number will automatically be attached to the event and contained in parameter 8.

Note: To view the parameters 1 through 8 from the Show and Event Log screens press the cursor right and cursor left keys.

System Fault and Status Messages

The eCNA-200 has a list of fault status messages that can be displayed due to various internal or external conditions. Most of these messages displayed indicate system faults. There are also some internal power up and reset diagnostic messages, most of which will not and should not be displayed under normal operating conditions.

Fault Condition Messages

The Fault Condition messages can be divided into three categories: Internal *memory* faults, *run-time* faults and *failsafe* faults.

Memory Faults

The internal memory faults are generated when there is a "checksum" error. Briefly, a checksum is an arithmetic sum of the contents of memory that is stored in the memory itself and is re-computed and checked each time the eCNA-200 is **powered up**. Each of the Programs (1 through 9), Supervisory, Cue Learn Times and Clock Start Times have a checksum. The fault messages are displayed and "blinked" on the top line of the display. Following are a list of the memory faults the eCNA-200 can display.

SUPERVISORY MEMORY FAULT
CLOCK START TIMES MEMORY FAULT
PROGRAM 1- 0 MEMORY FAULT
PROGRAM 2- 0 MEMORY FAULT
PROGRAM 3- 0 MEMORY FAULT
PROGRAM 4- 0 MEMORY FAULT
PROGRAM 5- 0 MEMORY FAULT
PROGRAM 6- 0 MEMORY FAULT
PROGRAM 7- 0 MEMORY FAULT
PROGRAM 8- 0 MEMORY FAULT
PROGRAM 9- 0 MEMORY FAULT
LEARN TIME MEMORY FAULT

Supervisory Memory Fault

A *Supervisory* memory fault indicates a checksum error in the Supervisory set-up data. Clear the fault message by pressing the ALARM CANCEL key. Enter the Set-up Supervisory screen and verify the Supervisory data. If necessary, edit to correct any data. Press the Home key to re-calculate the checksum and return to the Run Mode Screen. Cycle power to verify that there are no other checksum errors.

Clock Start Times Memory Fault

A *Clock Start Times* memory fault indicates a checksum error in the Clock Start times. Clear the fault message by pressing the ALARM CANCEL key. Enter the Set-up Clock Start Times screen and verify the start times for each day of the week. If necessary, edit to correct any data. Press the Home key to re-calculate the checksum and return to the Run Mode Screen. Cycle power to verify that there are no other checksum errors.

Program dd-dd Memory Fault

If any of the *Program* memory faults are displayed on power up, *clear* the fault message by pressing the ALARM CANCEL key. Enter the Set-up Program screen and select the program that has the fault. Scroll through the program to verify it. If all the steps look okay, press the Home key to re-calculate the checksum and return to the Run Mode Screen. Cycle power to verify that there are no other checksum errors.

Learn Time Memory Fault

A *Learn Time* memory fault indicates a checksum error in the saved Cue Learn times. Clear the fault message by pressing the ALARM CANCEL key. Enter the Set-up Cue Learn Times screen and verify the learn times for each program. If necessary, edit to correct any data. Press the Home key to re-calculate the checksum and return to the Run Mode Screen. Cycle power to verify that there are no other checksum errors.

Run-Time Faults

These messages will be displayed if there are the following network communications faults.

LOCAL I/O NETWORK FAULT
SYNC INTERLOCK FAULT ID=XX
SYNC COMMUNICATIONS TIMEOUT ID=XX

Local I/O Network Fault

The *Local I/O Network Fault* is caused due to a loss in communications with a Local I/O Network device or another network problem. This could be the Booth Termination Panel, Console Termination Panel or other I/O Network device, or a wiring problem. This fault will cause a shutdown during a show or prevent a show start between shows. This fault is latched and you are required to press the ALARM CANCEL key to clear the fault. Although this will cancel the fault and allow a show to start, there is a problem with the Local I/O Network or one of the devices and it must be repaired. See the Troubleshooting section for possible causes of this fault.

Sync Interlock Fault

Sync Interlock Fault ID=XX is displayed when either a master or one of the slaves in the sync loop has lost its sync input (sync switch). All eCNA-200s on the sync loop will display this message and sound their alarms. This message will also be displayed if one of the units on the loop had a "watchdog reset". If this was the case, all units will display this message except for one that had the watchdog reset.

Sync Communications Fault

Sync Communications Fault ID=XX is displayed when there is a loss of communications with a unit on the sync loop. This could be due to a loss of power of the master or one the slaves on the loop. In this case all units on the sync loop would display this message except for the one that lost its power. This fault can also be caused by defective wiring, such as an open or short on the communications link.

Failsafe Faults

There a number of local and synchronous failsafe faults that will shutdown a show that is running or prevent a show from starting or resuming.

Local Failsafe Faults

This is a list of messages that can be displayed due to one of the failsafe faults.

FILM PRESENCE OR TENSION FAULT
FILM MOTION FAULT
XENON LAMP FAILURE FAULT

Film Presence or Tension Fault

This fault indicates that the film failsafe does not sense film presence or the film tension is excessive. Correct the problem to clear the message.

Film Motion Fault

This fault indicates that the film motion sensing device did not detect the proper film speed after 2 seconds. Press the ALARM CANCEL key to clear the message.

Xenon Lamp Failure Fault

This fault indicates that the xenon lamp failed to light after 10 seconds. Press ALARM CANCEL to clear the message.

Sync Interlock Failsafe Faults

This fault indicates the master or one of the slave eCNA-200s has a failsafe fault that is preventing the interlock loop from *resuming* a show. The following messages are displayed to indicate the fault.

SYNC ID=dd NOT READY TO RUN
SYNC ID=dd NOT READY TO RESUME
SYNC: NEED MASTER TO RESUME
SYNC REMOTE STOP FAULT

Where *dd* is the remote eCNA-200 ID number (1 through 63)

Sync ID=dd Not Ready to Run

This fault indicates that the automation can not start a show because at least one of the eCNA-200 remotes are not in the “Ready to Run” condition.

Sync ID=dd Not Ready to Resume

This fault indicates that the automation can not start a show because at least one of the eCNA-200 remotes are not in the “Ready to Resume” condition.

Sync: Need Master to Resume

There is no master. The master may be lost if the communication wires are disconnected, power is

lost or the sync input (sync switch) is not enabled at the master.

Sync Remote Stop Fault

Indicates a fault on a remote eCNA-200 when interlocked. Correct the problem to clear the message.

Status Messages

Status messages serve as a reminder that a particular action or service be performed. These messages will not prevent the eCNA-200 from operating normally. Following is a list of messages the eCNA-200 can display.

```

MAINTENANCE SCHEDULE A FAULT
SCHEDULE A: XXXXXXXXXXXXXXXXXXXXXXXX
MAINTENANCE SCHEDULE B FAULT
SCHEDULE B: XXXXXXXXXXXXXXXXXXXXXXXX
MAINTENANCE SCHEDULE C FAULT
SCHEDULE C: XXXXXXXXXXXXXXXXXXXXXXXX
MAINTENANCE SCHEDULE D FAULT
SCHEDULE D: XXXXXXXXXXXXXXXXXXXXXXXX
MISSED CUE X
CHECK CUE LEARN TIMES
REMOTE ALARM AT ID:dd
FAULT DEFEAT ENABLED
LOW BATTERY FAULT
LIN REMOTE START INPUT
LIN REMOTE STOP INPUT
LSN REMOTE START INPUT
LSN REMOTE STOP INPUT*

```

Maintenance Schedule Fault

This status message indicates the maintenance is required for schedule A, B, C or D. Reset the timer in Supervisory when maintenance has been performed. You must reset the timer in Supervisory, by pressing 1 2 3 4 CLEAR, to clear the message.

Missed Cue

This message indicates that specific cue inputs were not received by the cue detector and an automatic cue was issued (Learned Mode). This indicates the film cues may be worn or missing. Clear the message by pressing the ALARM CANCEL key. This message may be suppressed with a setting in the Supervisory.

Check Cue Learn Times

This message is displayed after a show is run in Cue Learn Mode. This is a reminder to view and verify the Learn times. Clear the message by pressing the ALARM CANCEL key. This message may be suppressed with a setting in the Supervisory.

Remote Alarm at ID:dd

This message indicates a Fault - Alarm condition at remote eCNA-200, where dd is the ID number.

Fault Defeat Enabled

This message serves as a reminder to the operator that the Film Presence, Film Motion, Film Tension and Xenon Faults are bypassed. Set the Fault Defeat to Disabled to clear the message.

Low Battery Fault

Low battery fault indicates that the battery has gone below a pre-determined threshold voltage during a power down condition. If this message is displayed along with any *memory fault* messages, the low battery condition probably caused the other memory fault(s).

LSN Remote Start Input, LSN Remote Stop Input, LIN Remote Start Input, LIN Remote Stop Input

The network start and stop messages let the operator know that a start or stop input is asserted either at a remote control station on the LSN or LIN.

Network Status Messages:

"CP COMMUNICATIONS TIMEOUT"
"CP NOT IN AUTOMATION MODE"
"CP NOT READY"

The CAI Protocol

In brief, the CAI protocol, or Cinema Automation Interface is a set of commands that have been implemented to facilitate the homogenization of analog and digital projection equipment. This command set can be used by developers to send and receive status information over TCP/IP between Projection Equipment, PCs, and of course the eCNA automation. The commands, parameters, and supervisory settings used locally are covered in this manual. The command and response structure is covered in the Command Interface Protocol Manual.

The KDI Protocol

The KDI protocol, or Keypad Display Interface is a set of commands that have been implemented to allow the eCNA-200 automation's LCD display and membrane keypad the ability to interface with external devices via TCP/IP ethernet. Using this command group, external devices can access the display providing everything from help menus, personnel scheduling, and alerts, to direct status and control interfacing with devices such as audio processors and digital projection equipment. The potential applications are limited only by the user's imagination. See the KDI protocol section of the Command Interface Protocol Manual for further information.

Additional Software

CineNet Host Software Package

The eCNA-200 automation is optimally configured and used with the CineNet HOST software package. The Host program allows setup, data transfer and programming in a user-friendly format. Additional hardware and software is required. First there must be a Host Computer, this can be any DOS-based PC with either 1 free ISA slot and an RS-232 Serial port that is not in use, or just a free RS-232 port, installed on that PC there must be CineNet Host networking software. This software allows the PC to interface with the CNA. The only additional piece of hardware required is a network controller. This can be in the form of a ISA card installed in the PC, or a convenient external package such as the VNC or PCI-64 network interface.

See the CineNet HOST user manual for further details on installation. Host software provides remote Event logging, both LIN and LSN Network status, configuration, and programming/ copy functions.

CineSuite Software Package

The CineSuite software package is a more advanced version of HOST software including two Windows™-based software applications:

CineSuite Manager: This is the main user interface. When creating CNA programs, setting CNA supervisory functions or monitoring CNA operations, this is the application that will be used.

CineNet Driver: This is the software application that connects the CNA Gateway and automations to the computer. It must be running in the background when using the CineSuite Manager.

The CineSuite software operates over TCP/IP communications protocol meaning that it can be used in conjunction with the internet via a modem or any ethernet connection. It allows remote access to the automation network and provides a means of remotely monitoring devices on the CNA network. CineSuite Reporter software has a full color interface for quick identification of remote problems. Reporter can also email status reports to managerial personnel and generate reports over long periods of time in order to help gather vital performance data. Exciting new digital projection interfacing and other useful display controls are now available for the eCNA-200.

The CineSuite package is constantly under development with new features being added regularly. See the CineSuite Guide for additional information regarding the installation, configuration, and implementation of this software. The latest software versions are available for download at our web site www.eprad.com

CineSuite requires a Host PC and a hardware interface device. The Host PC must be at least a 486/66Mhz running Windows 95 or above.

Date: 4/23/04
Version: 2.000a
Checksum 60925

Fixed new "Lights" instruction 30. (Previous version did not allow lights to operate as expected) Stage lights instruction only supports the up and down instructions, this field can be set for mid1 and mid2 but they are not supported options, choosing these fields will cause the lights do go down. All other zones support all 4 states.

Date: 8/10/04
Version: 2.000b
Checksum 43703

Ported code to metroworks.

Modified chip select and hc16 init. to work with 29F040 Flash

Added TCP/IP stack and dumb-term task to support config of ETHERNET and IP setup on P8. RS-232, 19.2kBaud, *DB, N/P, 1/S, Hwe handshake.

Menu:

1-status

2-set mac ID

3-set IP address

4-Set ethernet full duplex

5-set ethernet 1/2 duplex

6-go online

7-go offline

Enter selection:

Added simple HTTP server on port 80, this can set the IP address and view basic status info. P-W has a 60 sec timeout.

Added LSN packet routing support for TCP host. CNA monitors port 16000 for host

Added CAI task to take over the control functions previously handled by CAI comm board.

(Supports original command set and monitors port 13000 as before, the "RES" command is accepted but no longer supported)

Content processor task takes commands directly from TCP port 13001 as before

New DIP switch selections:

S3-1 Default internet parameters

on = Default internet parameters to:

IP- 192.168.0.254

Half duplex

off = Use EEPROM parameters

S3-2 TCP Host

on = TCP host routing enabled

off = LSN 485 Host routing enabled

The default ethernet mac ID is handled separately and is automatically defaulted to 00-D0-AD-FF-00-01 if it is invalid.

Increased the Go to Application and Go to Bootloader shutdown delay from 5 to 7 seconds

Date: 8/30/04
Version: 2.000c
Checksum 28787

Fixed some typos in the web page
Added "parmok" parameter checking in ParseForm0002b()
Altered S3 Dip switch functions:
S3-8 = Default internet parameters
S3-7 = TCP host
S3 6-1 = Not configured, ("always off")

Reworked "host up" logic for TCP host. Also forces physical source and destination ID's to the dip switch setting when sending packets to the TCP host
Added 30 second activity timer to eNetTsk to monitor host interactions and close the connection if inactive.
Removed CAI Comm timeout message
Added graphics to web page 0000

Date: 9/15/04
Version: 2.000d
Checksum 63483

Upgraded to 1wIP v 1.0.0 (required a new lan96 driver and initialization.
Added subnet mask and gateway configuration parameters to web server and dumb-term task.

Date: 9/23/04
Version: 2.000e
Checksum 26792

Power up now correctly initializes hostid when sw3 is set for TCP host
Added content processor and EIB(CAI) connection IP addresses to web status screen.

Date: 10/6/04
Version: 2.000f
Checksum 4721

Added remote TCP terminal task to allow up to 5 other TCP/IP devices to access the eCNA-200's keypad and display.
Fixed RTC to read and write the day of the week correctly
Shortened key debounce
web server now shows additional connection IP addresses

Date: 1/13/05
Version: 2.001
Checksum 62633

Added password control for DIP switch setting @ SW2-2. The switch's operation can now be overridden at either the host or locally at CNA.
On = Password required regardless of DIP switch setting

Off = No password required regardless of setting
Default = Normal operation, switch enables/ disables password.

SW3-6 inhibits the operation of the RCM/ RSM-10 check focus alarm.
On = Disable the RSM/ RCM-10 alarm
Off = Enable the alarm

“Power-up” states for masking and sound are now configurable for flat scope special no-op and none, non-syn mono SVA SR dig1 dig2 aux1 aux2 mute-off mute-on and no-op

“Fault-to” states for lens, masking, sound, house lights, and stage lights are now configurable:
Lens: Flat scope special none no-op
Masking: flat scope special none and no-op
sound: non-syn mono aux1 aux2 dig1 dig2 no-op mute-on and mute-off.
h. Lights: up down mid1 mid2 no-op
s Lights: up down and no-op.

Date: 4/28/05
Version: 2.002
Checksum 43628

Fixed edit logic for MAC ID on the Dumb Terminal (P8 Port). Added space and “V” character to version display for the Dumb Terminal (P8 Port) Status function.

Date: 5/19/2005
Version: 2.003
Checksum 24185

Fixed links on embedded web server, Fixed code in EEROM.asm

Date: 10/5/05
Version: 2.006
Checksum

Added Instruction #35, Reworked P4 text, Added 5, 6, 7, and 8 to Supervisory menu. Added support for #17 and #18 LIN IDs.

Digital 1 and Digital 2 Cue inputs.

Start and Stop inputs.

Outputs:

DP1 Pwr On
DP1 Pwr Off
DP1 Vid Off
DP1 Vid On
DP2 Pwr On
DP2 Pwr Off
DP2 Vid Off
DP2 Vid On
In Progress
Fault
Fire Stop

Now skips “End Of Show wait for Timer K and Shut Down Timer when Film Power is off due to the new “Projector:” instruction.

Moved Saved copies of State Variables to a different RAM memory bank to free up some of the precious 16k of main read/write RAM.

Bootloader Changes:

This section documents changes in the eCNA’s bootloader program structure:

eCNABOOT v2.000

Checksum: 57159

Date: 4/20/04

This version requires eCNA mainboard 39425

Modified chip select and H16 initialization to run in the new eCNA mainboard.

Note: source was not ported to Metroworks for this

eCNABOOT v2.000a

Checksum: 55153

Date: 8/10/04

Ported code over to metrowerks tools. Modified Chip select and H16 initialization to run in the new eCNA Main board #39425 with AT29F040 FLASH chips, Added TCP/IP stack and Dumb Terminal Task to support configuration of the Ethernet and IP setup on P8

Added a simple HTTP Web Server on TCP port 80

Added LSN packet routing support for new TCP Host

Added new DIP Switch selections: S3-1: Default Internet Parameters, S3-2: TCP HOST

The Default Ethernet MAC ID is handled separately and is automatically defaulted to 00-D0-AD-FF-00-01

eCNABOOT v2.010

Checksum: 4126

Date: 1/21/05

Updated TCP/IP stack to v1.1.0

PGPO is now initialized low for compatibility with the next rev of hardware.

eCNABOOT v2.020

Checksum: 1293

Date: 4/28/05

Fixed edit logic for MAC ID on the Dumb Terminal (P8 Port).

Supervisory Defaults Explained:

eCNA-200 Supervisory

The mainboard Dip Switch #1 position #2 is used to restore factory defaults to your CNA's supervisory settings. This configuration is a default set of parameters that your CNA had when it left the factory.

When this switch is OFF, any custom supervisory settings are saved and restored upon power-up. These are the parameters that the user defines in the process of configuring an automation for a particular installation.

When this switch is in the ON position, factory defaults are restored each time power is cycled. All user defined supervisory parameters are cleared and the original factory defaults are loaded.

Below is a listing of Supervisory default parameters accessible from the CNA Supervisory menu or the CineNet Host menu:

1-System	Parameter:	Value:
	Sync.-Loop	0
	Sound Changeover Delay (Sec)	7
	Lens Changeover Delay (Sec)	8
	Lens Changeover Pulse (Sec)	.2
	Failsafe Delay (Sec)	1
	Cue Factor Default	.001
	Password Control	Default
	Password #1	xx
	Password #2	xxxx
	Cue Learn Mode	Manual
	Timed Start	Enabled
	Clock Start	Enabled
	Check Cue Fault	Disabled
	Missed Cue Fault	Disabled
	Fault Defeat	Disabled
	Time Format	12Hr
	Remote Stop Alarm Time (Sec)	30
	Out 1 Controls	None
	Out 2 Controls	None
	Out 3 Controls	None
	Out 4 Controls	None
	Schedule A	0
	Schedule B	0
	Schedule C	0
	Schedule D	0

Output:	Contacts:	Power-up:	Fault-To:
Lens	Pulsed	No-Op	Flat
Masking	Pulsed	Flat	Flat
Sound	Pulsed	Non-Sync	Non-Sync
H. Lights	Pulsed	Up	Up
S. Lights	Pulsed	Up	Up
Curtain	Pulsed	None	No-Op
Slide Proj	Maintained	On	On
Out 1	Pulsed	No-Op	No-Op
Out 2	Pulsed	No-Op	No-Op
Out 3	Maintained	No-Op	No-Op
Out 4	Maintained	No-Op	No-Op

2-Dimmer

	Variable 1:	Variable 2:	Variable 3:	Variable 4:	Variable 5:	
QDC 1	Channel 1	House	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 2	House	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 3	Stage	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 4	Stage	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
QDC 2	Channel 5	Channel 5	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 6	Channel 6	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 7	Channel 7	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 8	Channel 8	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
QDC 3	Channel 9	Channel 9	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 10	Channel 10	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 11	Channel 11	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 12	Channel 12	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
QDC 4	Channel 13	Channel 13	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 14	Channel 14	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 15	Channel 15	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%
	Channel 16	Channel 16	Up= 100%	Down= 0%	Mid 1= 50%	Mid 2= 50%

	Zone Name:		Zone Name:
0	None	9	Zone 9
1	House	10	Zone 10
2	Stage	11	Zone 11
3	Zone 3	12	Zone 12
4	Zone 4	13	Zone 13
5	Zone 5	14	Zone 14
6	Zone 6	15	Zone 15
7	Zone 7	16	Zone 16
8	Zone 8		

3-Sound

Parameter:	Value:
RVC 5	Disabled
Output 1	Dolby CP65
Output 2	Dolby CP65

The States of “No-Op” and “None”:

Although the No-Op and None states would seem to do similar things, they actually behave quite differently. No-Op can be thought of more accurately as “No-Change” and None, more like “All Off” The way each of these works is slightly different depending on what it is being used for.

Power Up States

The eCNA Automation remembers its current state for its outputs even when power is lost. This gives the eCNA automation the ability to return to its previous state when power is re-applied.

No-Op

When the power up state is set to No-Op, the eCNA will return the outputs to their previous state before the power loss. For maintained outputs this means engaging the relays and for the pulsed output the relays are pulsed.

None

When the power up state is set to None, the eCNA will do nothing on power up. It also sets its internal state for these outputs to none. For maintained outputs the relays remain off, and for pulsed outputs, there is no pulse.

Fault to states

No-Op

When the Fault-To state is set to No-Op, the eCNA will not change the relay states on a fault. For maintained outputs the relays will not change, For the pulsed outputs, no relays will pulse.

None

When the Fault-To state is set to None, the eCNA will turn off all outputs. It also sets its internal state for these outputs to none. For maintained outputs the relays are turned off, for pulsed outputs the relays are not pulsed.

Program Steps

No-Op

Applies only to Aux program step. Will cause the selected aux output to remain in it's current state.

None

Setting a program step output to None will turn off all of the outputs. It also sets its internal state for these outputs to None. For maintained outputs the relays are turned off. For pulsed outputs, no relays are pulsed.

Changing the state of some outputs to None can have an effect on the way the automation behaves later when the state is changed. An example would be the lens outputs. Setting the lens power Up or Fault-to outputs to None will cause the automation to close the dowser, mute the sound, and pulse the lens the next time any lens format is selected.

Index:

10Base-T	14
Alarm Loudness	19
Aux	41
Bootloader	4
Bootloader Changes	84
Building Programs	44
Changeover	39
Changeover Pulse	28
Changeover, Delay	40
Check Focus delay	7
Checksum	21
CineNet Driver	79
CineSuite	79
CineSuite Manager	79
Clock Start	29
Control Panel	8
Copy	50
Copy, Local	51
Copy, Network	53
Cue Factor	28, 38
Cue Learn	28
Cue Learn Function	59
Cue Window Factor	59
Curtain	37
Defaults	5
Description, Product	3
DHCP	17
Dimmer Set-Up	33
DIP switch Configuration	4
“Dumb-Terminal”	11
Embedded HTML server	13
Endless Loop Operation	63
Ethernet	14
Ethernet configuration menu	11
Event Filters	70
Event Log	66
Events	69
Failsafe delay	28
Failsafe Faults	75
Fault defeat	29
Faults	73
Film Format	38
Fire-Stop Option	7
Firmware Change History	80
Format	43
Gateway IP	13
Home Screen	10
House Lights	37
HTML-Based Configuration	13

ID, Network	5
Interface Hardware	14, 16
Intermission Wait	40
Introduction	8, 1, 20
IP configuration	14
Keypad	10
LAN	13
Lens	42
Lens Changeover Delay	27
LIN	3
LIN Status	56
Local I/O Faults	75
Loop, Sync	27
Low Battery Fault	78
LSN	3
LSN Status	56
Manual Control	6, 55
Masking	42
Memory Faults	74
Memory Faults, Clock Start	74
Memory Faults, learn Time	75
Memory Faults, Supervisory	74
Network ID	5
Network Status	55
Operator interface	8
Output Configuration	30
Password	6, 28
Password,1	28
PCI-64 network interface	79
Power up Screen	21
Program Instructions	36
Program Operation	43
Programming notes	47
Projector Motor/ Lamp	40
Remote Monitor	58
RJ45	11
Router	17
Run Hours	29
Run-Time Faults	75
Running the presentation	63
Schedule	29
Set Up Programs	35
Set up, Supervisory	23
Set-Up Clock Start	49
Set-Up cue Learn	48
Setup	20
Show Log	66, 72
Shutdown Delay	39
Slide Projector	38
Software Revision History	80
Sound Set Up	35

Sound Changeover Delay	27
Stage Lights	37
Static IP	17
Status LED's	19
Status Messages	73
Subnet mask	13
Supervisory	23
Sync Communications Faults	75
Sync Interlock Faults	75
Synchronous Operation	62
System Overview	1
TCP/ IP (Ethernet) Configuration	11
TCP/ IP Networking	17
TCP/IP	2-4
Time of Day	30
Timed Start	29
Version	21
VNC	30, 79
Volume fade time	41
Wait	44
Wait Cue	38, 43

List of Illustrations:

- Figure 1.1 eCNA-200 DIP Switch location
- Figure 1.2 eCNA Front Panel
- Figure 1.3 eCNA-200 Home Screen
- Figure 1.4 Main P8 TCP/IP Start screen
- Figure 1.5 Communications Port Locations
- Figure 1.6 Potential network configuration
- Figure 1.7 Status LED Locations and Alarm Volume Jumper
- Figure 2.1 Main eCNA Power up Screen
- Figure 2.2 eCNA-200 Home Screen
- Figure 2.3 Main Menu
- Figure 2.4 eCNA-200 Menu Structure
- Figure 2.5 Thru 2.18 eCNA-200 Screen Shots
- Figure 2.19 Cue Placement / Timing Diagram
- Figure 2.20 Thru 2.68 eCNA-200 Screen Shots
- Figure 3.1 Thru 3.9 eCNA-200 Screen Shots

eCNA-200 Parts List:

Below is a listing of the major components that make up the eCNA-200, the technician or theatre manager may find it useful when ordering replacement parts in the event of an automation component failure.

Description	OEM#	Strong#
eCNA-200 Display interface board	39327-1	5172010
eCNA-200 CPU Mainboard	39425-1	5172008
eCNA-200 Replacement Display	65001	Call
eCNA-200 Display conversion kit	65001-K-AorB	Call
eCNA-200 Replacement Overlay w/ Front panel	39320-1	Call
CNA Power supply	39328	5198304
CNA Replacement power transformer	64011	Call
eCNA-200 Wall-Mount Replacement Overlay w/ Front panel	39323-1w	Call
eCNA-200 Display inverter	39329	Call
eCNA-200 CFL Backlight replacement	39319	Call
DPST Rocker Switch, Power and Overrides	39336	Call
SPDT Rocker Switch, Overrides	39337	Call
SPDT Rocker Switch, Overrides	39338	Call
Replacement Pre-Programmed Flash Memory	39426	Call

Note: Other specific parts available upon request, contact Strong International for assistance.